




Model: iB24

Noise-Isolation, In-Ear Stereo Headphones with iPod/iPhone Volume Control

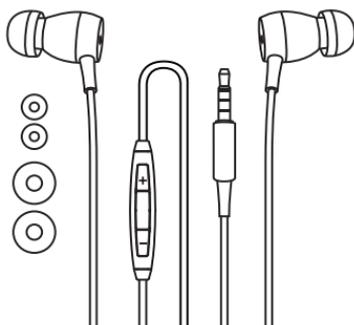

Using Your iHome Headphones

The earpieces are marked "L" and "R". Place the "L" earpiece in your left ear and the "R" earpiece in your right ear for proper fit and best sound. If the earpieces are inserted incorrectly they will not fit properly in your ears and the sound quality will not be satisfactory. When worn properly the iPod/iPhone controller will be positioned on your right side, closer to the right ear bud.

NOTE: Your iB24 headphones are supplied with three different size silicon tips (S-M-L) for maximum comfort and to seal out unwanted noise. The "M" (medium) size tips were installed at our factory. If you find that the installed tips are too small or too large for your ears, you may remove them and replace them with the larger or smaller size accessory tips. To replace the tips simply pull them off the earpieces. To install different size tips, push them on to the earpieces and make sure they are fully seated on each earpiece so that they do not come off when you remove the earpiece from your ear. If one of the tips remains in your ear when you remove the headphones, remove the tip carefully and avoid pushing it further into your ear canal. Seek medical assistance if one of the tips becomes lodged in your ear and you are unable to remove it.

Connect the headphone plug to the headphone jack of your music player. Be sure that the plug is fully inserted into the jack. If the plug is not fully inserted you may only hear sound from one earpiece.

To protect your hearing, always start listening with the In-Line Volume Control set to a low level and gradually increase the volume to a comfortable listening level.


Note: The iPod/iPhone controller on the cable performs the same functions as the controls on your iPod or iPhone. It is not necessary to make separate volume adjustments on your iPod/iPhone and on the controller.

Using the iPod/iPhone Controller

Note: This controller is designed specifically for use with Apple iPod and iPhone models. The controller will not work with other MP3 players, CD players, or other audio products that include a headphone jack.

The iPod/iPhone controller with microphone is compatible with the following iPod and iPhone models:

- iPhone 3GS – 16GB, 32GB
- iPod touch, 2nd generation – 8GB, 16GB, 32GB
- iPod nano, 5th generation, video camera - 8GB, 16GB
- iPod shuffle, 3rd generation – 2GB, 4GB
- iPod classic – 120GB, 160GB (2009)

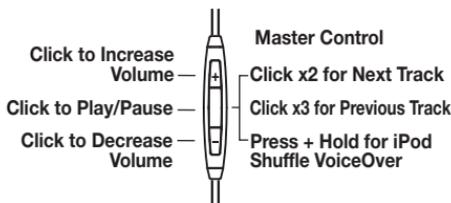

To Do This	Action Required
Activate voice control* Answer or end a call	Depress the Master Control for 2 seconds Press the Master Control once to answer call Press the Master Control again to end call
Ignore an incoming call	Depress the Master Control for 2 seconds
Answer a second incoming call and place original call on hold	Press the Master Control once to answer second call Press the Master Control again to return to first call
Answer a second incoming call, and end original call	Depress the Master Control for 2 seconds 2 low tones will confirm end of original call.
Switch between two calls	Press the Master Control once to switch between calls
Play or Pause	Press Master Control once to Play, again to Pause
Skip Track or Chapter Forward	Press Master Control 2 times quickly
Skip Track or Chapter Back	Press Master Control 3 times quickly
Increase Volume Decrease Volume	Press the "+" button Press the "-" button
Activate VoiceOver**	Press and hold the Master Control to hear title and artist of currently playing song
Navigate Playlists using VoiceOver**	Press and hold the Master Control until tone is heard, then release. When the name of the desired playlist is heard, press the Master Control once to select it.

* Voice control feature is only available on iPhone 3GS.

** VoiceOver feature is only available on the iPod shuffle 3rd generation.

IMPORTANT! Listening at high volume for long periods of time can result in long-term hearing damage. For your safety, do not use headphones if they would prevent you from hearing warning sounds, such as while driving a car or motorcycle, riding a bike, etc. Remember that noise isolation type earphones such as the iB15 are very effective in blocking outside noise, including warning sounds. Always be aware of your surroundings and do not use these earphones in situations that require you to hear warning sounds.

NOTE: In extremely cold or dry air conditions you may notice a slight 'tingling' feeling in your ears when using in-ear headphones. This is the result of the build-up of static electricity in your body. This is normal and not an indication of any problem with your headphones..

Limited 2 Year Warranty

iHome Products, a division of SDI Technologies Inc. (hereafter referred to as SDI Technologies), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 2 years from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI Technologies will repair or, at its discretion, replace this product without charge (except for a \$2.00 charge for handling, packing, return UPS/postage, and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase. The fee for service without proof of purchase is \$4.00.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove the batteries (if applicable) and pack the unit in a well padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase, if within the warranty period.
3. Enclose a check or money order payable to the order of SDI Technologies, for the sum of \$2.00 (\$4.00 without proof of purchase).
4. Send the unit prepaid and insured, to the Factory Service Center listed below.

Consumer Repair Department

SDI Technologies Inc.
1330 Goodyear Drive
El Paso, TX 79936-6420

Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI Technologies or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI Technologies product.

© 2010 SDI Technologies, Inc. All rights reserved

Questions? Visit www.ihomeaudio.com or call 1-800-288-2792 Toll Free.