

Model: iBT235

POWERCLOCK

Bluetooth Speaker + Two USB Charging Ports

Quick Start Guide

QUESTIONS? visit www.ihome.com

FEATURES & FUNCTIONS

TOP PANEL

nightlight

Power/Alarm Reset

Volume Down/Set

Snooze/Display Dimmer

nightlight

Play/Pause

Volume Up/Set

CLOCK DISPLAY

PM Indicator (Note: there is no AM indicator)

Sleep Mode

Bluetooth

ALM 1 Indicator

Low Backup Battery

ALM 2 Indicator

BACK PANEL

Bluetooth Pairing

Alarm 2

Sleep Mode

Alarm 1

Backup Battery Compartment

DST Switch

USB Charging Port (1A)

Time Set

USB Charging Port (1A)

DC Jack (3V/2.4A)

GETTING STARTED

Step One

Connecting the Unit

Step Two

Setting Your Clock

Step Three

Connecting to Bluetooth

SETTING THE ALARM

This unit features dual alarms which can be set to different times and alarm sources. Each is set in the same way. Instructions are given as Alarm Button - Press Alarm 1 or Alarm 2 to set respective alarm.

- Press and hold the **Alarm Button** for 2 seconds until the alarm time display and alarm icon flash.
- Press the **-** or **+** **Buttons** to adjust the alarm time (hold for rapid setting). Make sure you set the correct AM/PM alarm time. The PM indicator appears to the left of the time display. (There is no AM indicator).
- Press the **Alarm Button** to confirm the alarm time setting. Press the **-** or **+** **Buttons** to set the desired alarm schedule: 7 Days (every day), 5 Days (weekdays only) or 2 Days (weekends only).
- Press the **Alarm Button** to confirm the alarm schedule. Press the **-** or **+** **Buttons** to select the desired wake to alarm source: **Wake to Bluetooth**. Wake to a linked Bluetooth device. (Note: Be sure to adjust the volume on your Bluetooth device.)
- Wake to Tone**: Press the **Alarm Button** to confirm. Press the **-** or **+** **Buttons** to select one of four tones.
- Press the **Alarm Button** to confirm the alarm source.
- Press the **-** or **+** **Buttons** to select the alarm volume.
- Press the **Alarm Button** to confirm settings. The corresponding **Alarm Indicator** (1 or 2) will appear on the display to confirm the alarm is armed.

TURNING THE ALARM ON/OFF

Press the **Alarm Button** to preview the alarm time. Press again to toggle the alarm ON and OFF, indicated by the related LED indicator.

When the alarm sounds, press the corresponding **Alarm Button** (1 or 2) or the **Alarm Reset Button** to disable the alarm and reset it for the next day.

SNOOZE/DISPLAY DIMMER

Snooze: When the alarm is sounding, press the **Snooze/Dimmer Button** to snooze (default: 5 to 15 minutes).

Dimmer: Press the **Snooze/Dimmer Button** (when alarm is NOT sounding) to adjust display brightness.

PROGRAMMABLE SNOOZE

Set the duration of your snooze timer:

- To program Snooze, press and hold the **Snooze/Dimmer Button** for 2 seconds during normal operation (when no alarm is sounding).
- Press the **-** or **+** **Buttons** to select the desired snooze time (between 1 and 29 minutes).
- Press the **Snooze/Dimmer Button** to confirm setting. You can snooze the alarm repeatedly for up to one hour.

SLEEP TIMER

This unit allows you to sleep to the current sound source for a set time before turning the unit off. The Sleep Mode icon will appear on the display when time is active.

- To set Sleep time, press the **Sleep Button** as needed to cycle to the desired sleep duration: 120, 90, 60, 30 or 15 minutes or OFF (turns the unit off). Press and release the **Sleep Button** during sleep mode to review remaining sleep time.
- Press the **-** or **+** **Buttons** to adjust the sleep volume on the unit. Note that the sleep volume setting is stored separately from other volume settings.

USB CHARGING

Connect a USB cable (not included) to one of the two USB ports located on the back of the unit to charge devices. (Make sure the unit is plugged into a power outlet.)

BATTERY BACK-UP

The unit comes with a CR2450 battery to maintain alarm and clock settings during a temporary power failure. When the low battery icon appears on the clock display, it is time to replace the back-up battery. The battery compartment is located on the back of the unit.

- Make sure the AC adapter is connected, or you will lose your clock settings during battery replacement.
- Use a Phillips screwdriver to unscrew the battery compartment door.
- Remove the exhausted battery and insert a new CR2450 battery. Replace the compartment door. Do not overtighten the screw.

BATTERY USE CAUTIONS AND TIPS

- Only use the recommended/supplied batteries or equivalent.
- Use alkaline batteries for longer life.
- Insert batteries with proper polarity (+/-) as indicated.
- Remove exhausted batteries from the product.
- Recharge rechargeable batteries under adult supervision.
- Do not attempt to recharge non-rechargeable batteries.
- Do not open batteries or heat them beyond normal ambient temperatures.
- To prevent battery leakage or damage remove batteries from a product if it will not be used for a month or longer.
- Use extreme caution handling leaking batteries (avoid direct contact with eyes and skin). If battery leakage comes in contact with eyes, IMMEDIATELY flush the eye with lukewarm and gently flowing water for at least 30 minutes. If skin contact occurs, wash skin with clear water for at least 15 minutes. Seek medical attention if any symptoms occur.
- Store in cool, dry, ventilated area away from hazardous or combustible material.
- Follow applicable laws and local regulations for the disposal of batteries.

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read and follow all safety and operating instructions carefully before installation and use. Keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the product.

- Water and Moisture - The unit should not be used near water. For example, near a bathtub, washing tub, open sink, or shower, or in a wet basement.
- Ventilation - The unit should be situated so that the location or position does not interfere with proper ventilation. For example, should not be situated on a text, vinyl, rug or surface that may block ventilation openings. Also, it should not be placed in a built-in closet or in a locked or cabinet where it may impede the flow of air through the ventilation openings.
- Heat - The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including appliances) that produce heat.
- Power Sources - The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance. Only use the AC adapter that came with the unit.
- Power-Cable Protection - Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed on or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.
- Cleaning - The unit should be cleaned only as recommended. See the Maintenance section for cleaning instructions.
- Attachments - Do not use attachments not recommended by the product manufacturer or used in ways not intended or verified on the product.
- Lightning and Power Surge Protection - Unplug the unit from the wall socket and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power surges.
- Power-Line Protection - The unit should be serviced by qualified service personnel when:
 - The power supply cable or plug has been damaged.
 - Objects have fallen into or liquid has been spilled into the enclosure.
 - The unit has been exposed to rain.
 - The unit has been dropped or the enclosure damaged.
- Fire - The unit exhibits a marked change in performance or does not operate normally.
- Periods of Nonuse - If the unit is left unused for an extended period of time, such as a month or longer, remove batteries before storage.
- Service - The user should not attempt to service the unit beyond those methods described in the user manual. Service methods not covered in the operating instructions should be referred to a qualified service technician.
- Magnetic Interference - The product's speakers contain powerful magnets which could cause interference or damage to sensitive equipment such as hard drives, CRT televisions and monitors, as well as medical, scientific, and navigational devices. Keep this unit away from such equipment.
- Only use attachments/accessories specified by the manufacturer. This product is suitable for use in tropical and/or moderate climates.
- No naked flame sources, such as lighted candles, should be placed on the appliance.
- WARNING: To reduce the risk of fire or electric shock, do not expose the product to rain or moisture.
- Do not dispose of batteries in the household trash or fire.
- The means plug of power adapter is used as the disconnect device, it shall remain readily accessible.
- Clean only with dry cloth.
- Do not attempt to clean the environmental aspects of battery disposal.

CAUTION - Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

FCC INFORMATION

WARNING
Do not regard the battery. Chemical/Burn Hazard. This product contains a coin/button cell battery. Do not attempt to open the coin/button cell battery. Do not use, insert, remove, burn, or just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery is damaged or leaking, do not touch it. Do not throw the battery away from children. If you touch batteries which have been swallowed or placed inside any part of your body, immediately seek medical attention.

NOTES: The device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. Operations subject to the following two conditions:
(1) The device may not cause harmful interference, and (2) the device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this product requires approval by the party responsible for compliance could void the user's authority to operate the equipment.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can use radio frequency energy and, if not properly used, can cause interference with the instructions, may cause harmful interference to radio communications. However, this will not cause harmful interference and will not occur in a particular installation. This equipment does not use a radio frequency transmitter or receiver, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following practices:
• Recent or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or a qualified radio/TV technician for help.

CLASS B DIGITAL DEVICE
CAN ICES-3(B)/NMB-3

IC STATEMENT

The device complies with the Canadian Interference-causing (Niveau 1) limits that apply with Innovation, Science and Economic Development Canada's license-exempt (RESON) equipment. It is subject to the following two conditions:
(1) The device must not cause interference, and
(2) The device must accept any interference, including interference that may cause undesired operation or performance.

L'équipement respecte les limites d'émission électromagnétique (Niveau 1) qui s'appliquent avec l'Innovation, la Science et le Développement économique Canada's licence-exempt (RESON) équipement. Il est assujéti aux deux conditions suivantes:
(1) L'équipement ne doit pas causer d'interférence, et
(2) L'équipement doit accepter toute interférence, y compris l'interférence qui peut causer un dysfonctionnement ou une baisse de performance.

Le présent appareil est conforme aux normes canadiennes de la CSEI d'innovation, de la science et du développement économique Canada's licence-exempt (RESON) équipement. Il est assujéti aux deux conditions suivantes:
(1) L'appareil doit accepter toute interférence électromagnétique, y compris l'interférence qui peut causer un dysfonctionnement ou une baisse de performance.

Le présent appareil est conforme aux normes canadiennes de la CSEI d'innovation, de la science et du développement économique Canada's licence-exempt (RESON) équipement. Il est assujéti aux deux conditions suivantes:
(1) L'appareil doit accepter toute interférence électromagnétique, y compris l'interférence qui peut causer un dysfonctionnement ou une baisse de performance.

WARRANTY

For product support information and warranty please visit: www.ihome.com/support

© 2019 SDI Technologies, Inc. All rights reserved.
Questions? Visit www.ihome.com