

POWERCLOCK

Bluetooth Speaker + Two USB Charging Ports




Quick Start Guide

QUESTIONS? visit www.ihome.com

FEATURES & FUNCTIONS

TOP PANEL

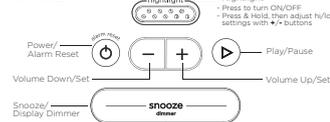

CLOCK DISPLAY



BACK PANEL



GETTING STARTED

Step One

Connecting the Unit

Connect the included AC adapter to the DC jack located on the back of the unit and connect the other end to a working wall outlet.



Step Two

Setting Your Clock

- Press and hold the **Time Set Button** until the display flashes.
- Press the **=** or **+ Buttons** to adjust selections and press **Time Set** to confirm. (Make sure to set correct AM/PM/time.)
- Do this for time, year, month and date.
- All done!



To toggle the clock display between 12/24 hr time, press **Alarm 1** or **Alarm 2** when the display is flashing during time setting.

Daylight Savings Time (DST) Switch:

By default, the DST Switch is set to Auto and will automatically adjust the time twice a year.

Step Three

Connecting to Bluetooth

- Ensure your device's Bluetooth is activated.
- Press and hold the **Bluetooth Pairing Button** on the iBT235 for 2 seconds to enter pairing mode.
- Select iHome iBT235 on your device's Bluetooth menu to connect!



SETTING THE ALARM

This unit features dual alarms which can be set to different times and alarm sources. Each is set in the same way. Instructions are given as 'Alarm 1' or 'Alarm 2' to set respective alarms.

- Press and hold the **Alarm Button** for 2 seconds until the alarm time display and alarm icon flash.
- Press the **=** or **+ Buttons** to adjust the alarm time (hold for rapid setting). Make sure you set the correct AM/PM alarm time. The PM indicator appears to the left of the time display. (There is no AM indicator.)
- Press the **Alarm Button** to confirm the alarm time setting. Press the **=** or **+ Buttons** to set the desired alarm schedule: 7 Days (every day), 5 Days (week days only) or 2 Days (weekends only).
- Press the **Alarm Button** to confirm the alarm schedule. Press the **=** or **+ Buttons** to select the desired wake to alarm source: **Wake to Bluetooth**, **Wake to Loudspeaker**, or **Wake to Tone**. (Note: **Be sure to adjust the volume on your Bluetooth device**.) **Wake to Tone**: Press the **Alarm Button** to confirm, Press the **=** or **+ Buttons** to select one of four tones.
- Press the **Alarm Button** to confirm the alarm source.
- Press the **=** or **+ Buttons** to adjust the alarm volume.
- Press the **Alarm Button** to confirm settings. The corresponding **Alarm Indicator** (1 or 2) will appear on the display to confirm the alarm is armed.

TURNING THE ALARM ON/OFF

Press the **Alarm Button** to preview the alarm time. Press again toggle the alarm ON and OFF, indicated by the related LED indicator.

When the alarm sounds, press the corresponding **Alarm Button (1 or 2)** or the **Alarm Reset Button** to disable the alarm and reset it for the next day.

SNOOZE/DISPLAY DIMMER

Snooze: When the alarm is sounding, press the **Snooze/Dimmer Button** to pause the alarm (clock advances 9 minutes).

Dimmer: Press the **Snooze/Dimmer Button** (when alarm is NOT sounding) to adjust display brightness.

PROGRAMMABLE SNOOZE

Set the duration of your snooze timer:

- To program Snooze, press and hold the **Snooze/Dimmer Button** for 2 seconds during normal operation (when no alarm is sounding).
- Press the **=** or **+ Buttons** to select the desired snooze time (between 1 and 29 minutes).
- Press the **Snooze/Dimmer Button** to confirm setting. You can snooze the alarm repeatedly for up to one hour.

SLEEP TIMER

This unit allows you to sleep to the current sound source for a set time before turning the unit off. The Sleep Mode icon will appear on the display when timer is active.

- To set Sleep time, press the **Sleep Button** as needed to cycle to the desired sleep duration: 120, 90, 60, 30 or 15 minutes or OFF (turns the unit off). Press and release the **Sleep Button** during sleep mode to review remaining sleep time.
- Press the **=** or **+ Buttons** to adjust the sleep volume on the unit. Note that the sleep volume setting is stored separately from other volume settings.

USB CHARGING

Connect a USB cable (not included) to one of the two USB ports located on the back of the unit to charge devices. (Make sure the unit is plugged into a power outlet.)



BATTERY BACK-UP

The unit comes with a CR2450 battery to maintain alarm and clock settings during a temporary power failure. When the low battery icon appears on the clock display, it is time to replace the back-up battery. The battery compartment is located on the back of the unit.

- Make sure the AC adapter is connected, or you will lose your clock settings during battery replacement.
- Use a Phillips screwdriver to unscrew the battery compartment door.
- Remove the exhausted battery and insert a new CR2450 battery. Replace the compartment door. Do not overtighten the screw.



BATTERY USE CAUTIONS AND TIPS

- Only use the recommended/supplied batteries or equivalent.
- Use alkaline batteries for longer life.
- Insert batteries with proper polarity (+/-) as indicated.
- Remove exhausted batteries from product.
- Recharge rechargeable batteries under adult supervision.
- Do not attempt to recharge non-rechargeable batteries.
- Do not open batteries or heat them beyond normal ambient temperatures.
- To prevent battery leakage or damage, remove batteries from a product if it will not be used for a month or longer.
- Use extreme caution handling leakage batteries (avoid direct contact with eyes and skin). If battery leakage comes in contact with eyes, IMMEDIATELY flush the eyes with lukewarm and gently flowing water for at least 15 minutes. If skin contact occurs, wash skin with clear water for at least 10 minutes. Seek medical attention if any symptoms occur.
- Store in cool, dry, ventilated area away from hazardous or combustible material.
- Follow applicable laws and local regulations for the disposal of batteries.

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read and follow all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. List special note of all warnings listed in these instructions on the unit.

- Water and Moisture** - The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, swimming pool, hot tub or in wet basements.
- Ventilation** - The unit should be situated so that its location or position does not interfere with normal ventilation. For example, should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should be placed in a built-in cabinet or enclosure that has adequate circulation of air through the ventilation openings.
- Heat** - The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
- Power Sources** - The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the application. Only use the AC adapter that came with the unit.
- Power-Cable Protection** - Power supply cables should be routed so that they are not likely to be walked on or pinched by items stacked upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.
- Cleaning** - The unit should be cleaned only as recommended. See the Maintenance section for cleaning instructions.
- Objects and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.
- Lightning and Power Surge Protection** - Unplug the unit from the wall socket and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power line surges.
- Damage Repairing Service** - The unit should be serviced by qualified service personnel when:
 - The power supply cable or plug has been damaged.
 - Objects have fallen into or liquid has been spilled into the enclosure.
 - The unit has been exposed to rain.
 - The unit has been dropped or the enclosure damaged.
 - The unit exhibits a marked change in performance or does not operate normally.
- Periods of Non-use** - If the unit is to be left unattended for an extended period of time, such as a month or longer, remove batteries before storage.
- Service** - The user should refer to the service the unit beyond those methods described in the user manual. Service methods not covered in the operating instructions should be referred to qualified service personnel.
- Magnetic Interference** - The speaker's speakers contain powerful magnets which could cause interference or damage to sensitive equipment such as hard drives, CD/DVD televisions and monitors, as well as medical, scientific, and navigational devices. Keep this unit away from sensitive equipment.
- Only use attachments/accessories specified by the manufacturer.** This product is suitable for use in tropical and/or moderate climates.
- No related flame sources**, such as lighted candles, should be placed on the apparatus.
- WARNING:** To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
- Do not dispose of batteries in the household trash or fire.
- The mains plug of power adapter is used as the disconnect device. It shall remain readily accessible.
- Clean only with dry cloth.
- Attention should be drawn to the environmental aspects of battery disposal.

CAUTION - Danger of explosion if battery is incorrectly assembled. Replace only with the same or equivalent type.

FCC INFORMATION

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.
- These limits are designed to provide reasonable protection against harmful interference in a residential installation.
- This equipment uses a radio frequency transmitter. If not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
- However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Rear or relocate the receiving antenna.
 - Increase the distance between the equipment and receiver.
 - Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

IC STATEMENT

This device complies with Industry Canada (Interference) which complies with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émission/écartement exempt de licence continue dans le présent appareil est conforme aux CNR d'Innovation, Science et Développement économique Canada (Interférence) qui est conforme aux normes radio-exempt de licence. L'appareil est autorisé à émettre de l'énergie radioélectrique sans licence.

(1) L'appareil ne doit pas causer d'interférence.

(2) L'appareil doit accepter toute bruyance radioélectrique sans, même si le bruyance est susceptible d'entraîner un fonctionnement de l'appareil.

This equipment does not require to be installed, operated with a minimum distance of 20 cm between the radiator and your body.

WARRANTY
For product support information and warranty please visit:
www.ihome.com/support