

## A Consumer Guide to Product Safety

### IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. Water and Moisture - The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
2. Ventilation - The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.
3. Heat - The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
4. Power Sources - The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
5. Power-Cable Protection - Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.
6. Cleaning - The unit should be cleaned only as recommended. See the Maintenance section of this manual for cleaning instructions.
7. Objects and Liquid Entry - Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.
8. Attachments - Do not use attachments not recommended by the product manufacturer.
9. Lightning and Power Surge Protection - Unplug the unit from the wall socket and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.
10. Overloading - Do not overload wall sockets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
11. Damage Requiring Service - The unit should be serviced by qualified service personnel when:
  - A. the power supply cable or plug has been damaged.
  - B. objects have fallen into or liquid has been spilled into the enclosure.
  - C. the unit has been exposed to rain.
  - D. the unit has been dropped or the enclosure damaged.
  - E. the unit exhibits a marked change in performance or does not operate normally.
12. Periods of Nonuse - If the unit is to be left unused for an extended period of time, such as a month or longer, the power cable should be unplugged from the unit to prevent damage or corrosion.
13. Servicing - The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.

### Lithium-ion Battery

#### Internal Rechargeable Lithium-ion Battery

This device uses an internal rechargeable lithium-ion battery that should last the lifetime of the device. If you suspect your battery may be dead, try charging it several times. If the battery does not recharge, please contact Customer Service at 1-800-288-2792

#### WARNING/DISPOSAL OF UNIT

Please do NOT attempt to change the battery yourself. Doing so can damage your device and will void your warranty.

- Never dispose of used batteries/electronics with ordinary solid wastes, since they contain toxic substances.
- Always dispose of used batteries/electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics. If there are no local regulations concerning battery/electronics disposal, please dispose of the device in a waste bin for electronic devices.

# iHome

Model: iBT371

Portable Rechargeable  
Color Changing  
Bluetooth  
Speaker

**CHARGE  
BEFORE  
USE**



BC

FCC ID: EMOIBT371  
IC: 986B-IBT371

#### FCC Information

#### FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### CAN ICES-3 (B)/NMB-3(B)

#### Canada Statement

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

(1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

(1) l'appareil ne doit pas produire de brouillage; (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la section 2.5 de RSS 102 et la conformité à l'exposition de RSS-102 rf, utilisateurs peuvent obtenir l'information canadienne sur l'exposition et la conformité de rf.

DID: D025616

**IMPORTANT**

#### Read before proceeding

If you have any question regarding the operation or use of this product, please visit [www.ihome.com](http://www.ihome.com) to view answers to frequently asked questions.

To learn more about this and other iHome products, please visit us online at [www.ihome.com](http://www.ihome.com)

- Many electronics retailers now recycle batteries and other electronic components at no charge. Check to see which ones in your area do so.

#### CAUTION

The battery used in this device may present a risk of fire, explosion or chemical burn if mistreated

- Never use or charge the battery if it appears to be leaking, discolored, deformed, or in any way abnormal.
- Never disassemble the unit or attempt to remove battery as that could cause leakage of alkaline solution or other electrolytic substance.
- Always confirm that the temperature is 5°C - 35° C (41° - 95° Fahrenheit) before you charge the battery. Leakage or deterioration of the battery may occur if this warning is not heeded.
- Never expose the battery to any liquid.
- Never expose the battery to excessive heat such as direct sunlight or fire. Never use the battery pack in an unventilated vehicle where excessive internal temperatures may be encountered.
- Always keep the battery out of the reach of infants and small children.

### Maintenance

- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
- Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents such as thinner or similar materials can damage the surface of the unit.

### Limited 1 Year Warranty Information

iHome Products, a division of SDI Technologies Inc. (hereafter referred to as SDI), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service.

If service is required, please call Customer Service at 1-800-288-2792 to obtain a Return Authorization Number and shipping instructions. A copy of the sales receipt is required to validate in-warranty coverage.

#### Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI product.

© 2017 SDI Technologies, Inc. All rights reserved  
Questions? Visit [www.ihome.com](http://www.ihome.com)  
or call 1-800-288-2792 Toll Free

iBT371-151116-A


Printed in China

### Waterproof Operation


For waterproof operation, ensure the waterproof cover on side of unit is pressed completely flush with the unit.



### Bluetooth Mode

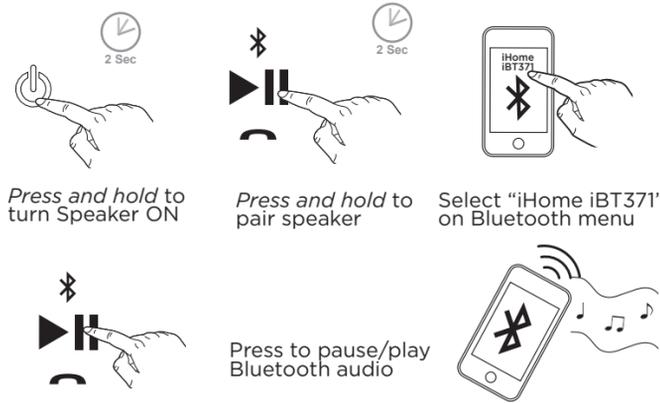


#### Top View

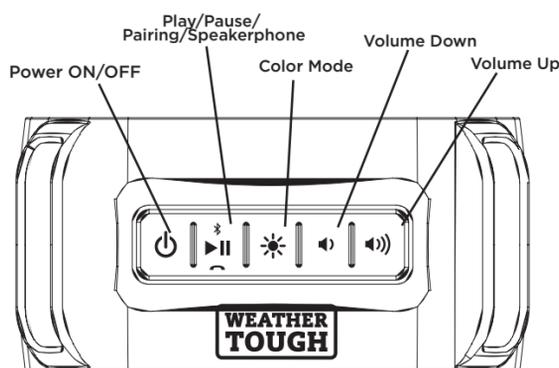

#### Pinhole Reset

To reset the iBT371, use the tip of a paper clip or similar to press in the Pinhole Reset.

#### USB Charging Jack

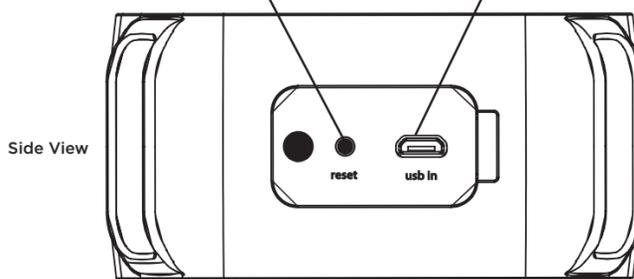


#### Side View

### Charging the iBT371

CHARGE BEFORE USE

charging cable included

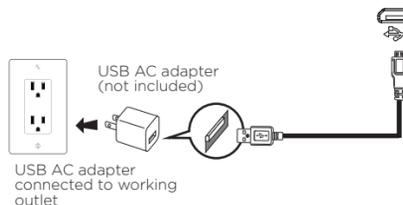

#### Charging cable



### Speakerphone Mode



Press to answer and end calls

### Color Mode



Press the Color Mode Button to cycle through Slow, Fast, One Color, Pulse to Music, Preset Pulse and Off.

### Using the iBT371

The iBT371 comes equipped with a Weather Tough rubberized cover that protects the charging port. Make sure the rubber cover (located on the side of the unit and marked with a lightning bolt symbol) is sealed shut before operating near water or dust.

### Charging the iBT371

The iBT371 is powered by a rechargeable battery in the speaker. Make sure to charge speaker before use.

- Connect the micro-USB plug on the included charging cable to the USB Charging jack on the speaker.
- Connect the larger USB plug to a powered USB port, such as that on a USB AC adapter connected to a wall outlet. The light on the speaker will flash red while charging and turn solid red when fully charged.
- If the LED flashes red, or you notice sound distortion at higher volumes, or there is no sound at all, it's time to recharge the battery.

### Using Bluetooth

- Place your audio device in Bluetooth mode (often found in the device's Settings or Tools menu) and make it "discoverable"
- Press and hold the Power ON/OFF Button for 2 seconds to turn on the iBT371 speaker. The first time unit is powered on it will enter auto pairing mode. The LEDs will flash blue and red, a tone will sound as the speaker attempts to pair with a Bluetooth device.
- Select "iHome iBT371" on your device's Bluetooth menu to pair. If your device asks for a passcode, enter '1234'.
- For manual pairing, power on speaker, then press and hold the Play/Pause/Pairing//Speakerphone Button for 2 seconds.
- Once paired, the light will glow solid blue and a confirmation tone will sound. You can then stream audio to the speaker. If pairing is not successful, turn the power off on the speaker and repeat pairing procedure.
- To listen to Bluetooth audio, put your connected device in play mode. Press the Play/Pause/Pairing//Speakerphone Button on the speaker to cycle between play and pause modes.
- Press Volume Up or Down buttons to control audio levels. Control track navigation from your device. Remember to turn off the speaker (press and hold the Power ON/OFF Button for 5 seconds) and your device after listening.

### Using Speakerphone

The speaker must be on and connected to a paired Bluetooth phone to receive calls. When a call comes in, any playing audio is paused, the LED will flash blue 2X and the ringtone associated with the caller may sound, depending on Bluetooth device.

- Press the Bluetooth/Speakerphone Button to answer the call. Press again to end the call.