Model: iBTW20


TIMEBASE

Wireless Charging Stand + Speaker



Quick Start Guide QUESTIONS? visit www.ihome.com

FEATURES & FUNCTIONS

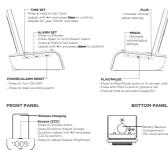

BACK PANEL

DISPLAY ICONS

GETTING STARTED

Step One

ing the Unit

Before use, remove the battery pull tab from the bottom of the unit. Connect the T 🗮 🐧 🚳 included AC adapter to the DC jack located on the back of the unit and connect the other end to a working wall outlet

Step Two

ng to Bluetooth . Turn on your Bluetooth device and make it

'discoverable' by turning on Bluetooth mode · Press and hold the Bluetooth Pairing

Button on the TIMEBASE to enter pairing . Select 'iHome iBTW20' on your device's

Bluetooth menu to connect!

Step Three

tting the Time · Press and hold the Time Button until the

- clock display begins to flash . Use the +/- Buttons to adjust the time
- . Press the Time Button to confirm the time

Note: Make rure to not the

correct AM/PM time. The

PM indicator will annear

on the left side of the

display. There is no AM

. The year will flash on the display. Use the +/- Buttons to adjust the year, and press the

Time Button again to confirm . The month will flash on the display. Use the

- +/- Buttons to adjust the month, and press the Time Button again to confirm.
- . The date will flash on the display. Use the

+/- Buttons to adjust the date and press the Time Button again to confirm all settings.

SETTING THE ALARM without any changes saved.

Each step must be completed while display is flashing or setting will time-out 1. Press and hold the Alarm Button for 2 seconds until the alarm time display and

- alarm icon flash
- 2. Press the or + Buttons to adjust the alarm time to the desired time (hold for rapid setting). Make sure you set the correct AM/PM alarm time. The PM indicator appears to the left of the display.
- 3. Press the Alarm Button to confirm the alarm time setting. The alarm schedule will flash: 7 (every day), 5 (weekdays) or 2 (weekend only). Press the - or + Ruttons to select the desired plarm schedule
- 4. Press the Alarm Button to confirm the alarm schedule. Now use the or + Ruttons to set the wake to source
- Tones: Wake to built-in tones. Press the or + Buttons to cycle through tones.
- Bluetooth: Wake to audio from a connected Bluetooth device. Beep: Wake to beeping sound 5. Press the Alarm Rutton to confirm. Now use the - or + Ruttons to control the
- alarm volume and press the Alarm Button once more to confirm all settings, 2 beeps will confirm alarm setting is complete. The alarm icon will remain on the display, indicating the alarm is armed. 6. To turn off a sounding alarm and reset it to come on the next day at the same
- time press the Alarm Button to reset alarm

PREVIEWING THE ALARM

Press and release the Alarm Button as needed to preview the alarm and to toggle the alarm ON (indicated by the alarm icon) or OFF (no alarm icon).

PROGRAMMABLE SNOOZE

1. To program Snooze, press and hold the ZZZ Button during normal operation (when no alarm is sounding).

2. Press the + or - Buttons to select a snooze time between 1-29 minutes. 3. Press the ZZZ Button to confirm Snooze setting. When the alarm is


sounding, press down on the ZZZ Button to temporarily silence the alarm (9 minutes is the default)

WIRELESS CHARGING Supports

· Qi compatible phones (also works with plastic cases up to 3mm thick*)

charging status

Place Qi compatible device face up on the charging rest as pictured below.

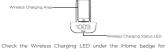

Slow blinking LED: Device is charging properly.

Solid LED: Device is charged. Rapid blinking LED: Device is not charging properly. Reposition

(LED may continue to blink slowly when iOS devices are fully charged.)

Remove metal protective or magnetic case from phone before charging. When charging phone, do not place magnetic-striped or other metal objects on the charger. Doing so could damage the object or this unit. Qi compatible phones with metallic looking finishes will charge normally.

* Some larger size phone cases may not be able to charge. Remove case to charge phone properly.

USB CHARGING

order to charge devices.)

Connect the standard size end of a USB cable (not included) to the USB nort on the back of the unit and connect the other end to the charging port on your device. (Make sure the unit is plugged into a working outlet in



BATTERY BACK-UP The unit comes with a CR-2450 back-up battery installed to

provide continuous alarm operation and clock settings in the event of a temporary power failure. Remove the battery pull tab before use. When the battery icon on the clock display is flashing, it is time to replace the back-up battery. The battery compartment is located on the bottom of the unit 1 Make sure the AC adapter is

) фu

- connected, or you will lose your time and alarm settings during battery replacement 2. Use a Phillips screwdriver to open
- the battery compartment door. 3. Remove the exhausted battery from
- the compartment and insert 1 CR-2450 battery, checking that the + side is facing you. Replace the overtighten



shorted, recharged, exposed to water, fire, or high temperatures. Do not place loose batteries in a pocket, purse, or other container containing metal objects, mix with used or other battery types, or store with hazardous or combustible materials. Store in cool, dry, ventilated area, Follow applicable ws and regulations for transport and disposal.

- · Do not ingest the battery, Chemical Burn Hazard. This product contains a cause severe internal burns in just 2 hours and can lead to death.
- · Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention
- · Attention should be drawn to the environmental aspects of battery 5

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read and follow all safety and operating instructions carefully before installation and use, and leven these instructions handy for future reference. Take special note of all warnings listed in these

- furctions and on the unit.

 Witter and Modure The unit should not be used near water. For example: near a bathfuln, washfook (lichten said, blandy bub, swimming pool or in a well basement, which washfook (lichten said, blandy bub, washfook) is the said of a bett said for a per said or a per said of the said of the said of the said of a bett said on a best done for a per said of the sai ventilation openings.

 Heat - The unit should be situated away from heat sources such as radiators, heat registers.
- at the lunis should be situated away from heat sources such as rediators, near registers, views or other appliances (including amplifiers) that produce heat. When the specifier is specified to a power supply of the type described in or operating instructions or as marked on the appliance. Only use the AC adapter that came
- h the unit. wer-Cable Protection Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.
- Cleaning Clean only with dry cloth Objects and Liquid Entry - Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.

 Attachments - Do not use attachments not recommended by the product manufacturer. Lightning and Power Surge Protection - Unique the unit from the wall socket and disconnect.
- Lighting and Power Surge Protection Unplug the unit from the wall societ and disconnect the attened or calls system during a lighting storm own that is all in utatiented out urused power five surges. One thought and the product during to the product due to lighting and power five surges. One content was used societies, extension consist, or retirgual commentee to Centrading Do not overload wall subsocieties extension consist, or retirgual commentee Damage Requiring Service The unit should be serviced by sualfied service personnel when A the power supply called or july jack bere dumingset.
 - B. objects have fallen into or liquid has been spilled into the enclosure C. the unit has been exposed to rain.

 D. the unit has been dropped or the enclosure damaged
- Dit the unit has been dropped or the enclosure damaged.

 Dit the unit has been dropped or the enclosure damaged.

 Ethe unit enhibits a marked drevel per performance or does not operation committee.

 Ethe unit enhibits a marked drevel per performance or described period of time, such as a morth for longer, remove batteries before storage among the period drevel period does methods described enhibits.

 Servicing—It was refounded to the period drevel period dreve
- nterference or damage to sensitive equipment such as hard drives, CRT televisions and nonitors, as well as medical, scientific, and navigational devices. Keep this unit away from these
- Only use attachments/accessories specified by the manufacturer. This product is suitable for
- use in tropical analyse answers specified by the manufacture. This product is suitable for use in tropical analyse moderate clinicals of control and the product of control analyse of control of protein principal specified conditions thought be produced on the appareture. No native filters counts such as lighted condition, should be produced on the appareture. No native filters counts such as lighted condition, should be produced on the appareture. So control and the product of the
- Do not dispose of batteries in the household trash or fire
 The mains plug of power adaptor is used as the disconnect device, it shall remain readily

LIMITED ONE YEAR WARRANTY iHome Products, a division of SDI Technologies Inc. (hereafter referred to as SDI),

warrants this product to be free from defects in workmanship and materials, unde normal use and conditions, for a period of one (1) year from the date of original purchase. Should this product fail to function in a satisfactory manner, it is best to first matter and service still be required by reason of any defect or malfunction during the warranty period, SDI will repair or, at its discretion, replace this product without che This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service. If service is required, please visit ihome.com/support for more information. A copy of the sales receipt is required to validate in-warranty coverage.

Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members o agents be liable to you or any third party for any consequential or incidental damage any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these ins may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Your acknowledgment and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI product

© 2019 SDI Technologies, Inc. All rights reserved Questions? Visit www.ihome.com