

iBTW41 - 05G (English)
 Size: 700 x 160 mm (unfolded), 140 x 160 mm (folded)
 Color: IC + IC
 Material: 157gsm, art card, IC + IC, 厚纸
 May 25, 2020
 Front Cover



iHome

Model: iBTW41

TIMEBOOST

Bluetooth Speaker + Wireless Charger

Quick Start Guide

For warranty visit: www.ihome.com.hk/support

What's Included:

- iBTW41 Unit
- AC adapter

Meet Your Home TimeBoost iBTW41

Top

- Power/Alarm Reset
- Volume +/-
- Bluetooth Pairing
- Snooze/Display Dimmer
- Alarm 1
- Alarm 2
- Auto Dimmer Sensor
- Speaker/Phone/Siri/Google

Back

- Time Set
- 3.5V/3.0A DC Jack
- 3.5V/1A USB Port (for charging device)
- USB Switch
- Bluetooth Pairing

Bottom

- Battery Back-Up Compartment

***Remove battery pull tab before use**

Quick Set-Up:

Step One: Connect the DC Jack

Connect the included AC adapter to the DC jack located on the back of the unit and connect the other end to a working wall outlet.

Step Two: Bluetooth Pairing

- Turn on your Bluetooth device and make it discoverable by putting on Bluetooth mode.
- Press the **Power Button** on the iBTW41.
- Press and hold the **Bluetooth Pairing Button** on the back of the iBTW41 until the Bluetooth Pairing icon flashes to indicate the unit is in pairing mode.
- Select iHome TimeBoost* on your device's Bluetooth menu to connect!

Step Three: Time Set

Press and hold the **Time Set Button** until the digital time is shown.

- Press the **+** or **-** buttons to adjust selections and see **Time Set** to confirm (make sure you set the correct AM/PM time).
- Do this for time, year, month and date.
- Adjust.

Daylight Savings Time:
 By default, the **Time Set Switch** is set to Auto and will automatically adjust the time in March and November.

Tip: Press the Alarm 1 Button during clock setting to toggle the clock between 12 or 24 hour display modes.

The Display

Bluetooth Mode
 Wireless Charging
 Bluetooth Pairing Icon
 IP Indicator

Using Qi Wireless Charging

The unit will wirelessly charge Qi-compatible wireless charging devices. Please Qi-compatible device face on charging pad.

Check the lightning icon on the iBTW41 display for charging status.

Slow Charging / Fast Charge: Device is charging properly. **Safe / Fast:** Device is charging. **Unsafe / No Fast:** Device is not charging properly. (Reposition device.)

Note: The lightning icon may continue to blink slowly when Qi devices are fully charged.

CAUTION: Remove metal protective or magnetic case from phone before charging. When charging phone, do not place magnetic strips or other metal objects on the charger. Doing so could damage the object or the unit. Qi-compatible phones with metallic-looking finishes will charge normally.

Setting and Using the Alarms

This unit features dual alarms which can be set to different times and alarm sources. Each is set in the same way. Instructions are given as "Alarm Button" use **Alarm 1 Button** or **Alarm 2 Button** to set respective alarms. **NOTE:** Each one must be confirmed (time, device, ringing or setting will time-out with any charges saved).

- Press and hold the **Alarm Button** for 2 seconds until the display flashes. A beep sounds.
- Press the **+** or **-** Buttons to adjust the alarm time to the desired time (read for next setting).
- Press the **Alarm Button** to confirm the alarm time setting. The alarm schedule will flash 2 times.
- Press the **Alarm Button** or **Power Button** to select the desired alarm schedule.
- Press the **Alarm Button** to confirm the alarm checked. The wake-to-sound will flash.
- Press the **+** or **-** Buttons to select the desired wake-to-alarm source: Bluetooth or Tone.

Wake to Bluetooth: This will wake to the currently linked Bluetooth device if no device is connected, the alarm will default to the last device selected.

Wake to Tone: Press the **Alarm Button** to confirm. Press the **+** or **-** Buttons to select the desired tone to wake to (Tone 1 - Tone 4).

- Press the **Alarm Button** to confirm audio-to-sound. The alarm volume will flash.
- Press the **+** or **-** Buttons to adjust the alarm volume.
- Press the **Alarm Button** to confirm the alarm settings and exit alarm setting mode. 2 beeps will confirm alarm setting is complete. The alarm icon will remain on the display to show the alarm is armed.

Preventing the Alarm and Turning the Alarm On/Off

- Press and hold the **Alarm Button** to view the current alarm time.
- Press the **Alarm Button** to stop the alarm. On and Off, indicated by the related white alarm indicator.
- When the alarm sounds, press the **Power/Alarm Reset Button** or the corresponding **Alarm Button** (or **2**) to disable the alarm and reset it to come on at the same time the next day.

Snooze/Display Dimmer

Snooze: When the alarm is sounding, press the **Snooze/Dimmer Button** to snooze for 9 minutes.

Dimmer: Press the **Snooze/Dimmer Button** (when alarm is NOT sounding) to adjust display brightness.

Programmable Snooze

To adjust the snooze function:

- Press and hold the **Snooze/Dimmer Button**.
- Press the **+** or **-** Buttons to adjust the snooze duration from 0-29 minutes. Press the **Snooze/Dimmer Button** again to confirm.

Display Auto-Dimmer

This unit is equipped with a sensor that will automatically adjust the brightness of the clock display based on ambient light in your room. When the room is well lit, the display will adjust to its brightness for better visibility. In a dark room, it will dim to a lower brightness. You can adjust the "sober time" of the Auto-dimmer to fit your personal preference of display brightness in a dark room.

The 3 options are:

- Auto 2* -** minimum brightness setting will be level 2.
- Auto 3* -** minimum brightness setting will be level 3.
- Auto 0* -** clock display will turn FULLY OFF in a dark room.

To adjust Dimmer settings:
 Press the **Snooze/Dimmer Button** repeatedly to cycle through brightness levels: Auto 3, Auto 2, Auto 0, H, S, 2, 1, or OFF. (Note: choosing **H, S, 2, 1, or OFF** are fixed settings and will not auto-adjust.)

Manual Bluetooth Pairing

- Press and hold the **Bluetooth Pairing Button** on the back of the iBTW41 for 2 seconds.
- Select iHome TimeBoost* on your device's Bluetooth menu to connect.
- If pairing is successful, the Bluetooth indicator appears solid on the clock display, indicating the iBTW41 is ready to play music.
- To reset Bluetooth settings, press and hold the **Bluetooth Pairing Button** for 10 seconds.

Playing Audio Via Bluetooth

Press the **Play/Power/Speakerphone Button** on the unit to play or pause audio from your linked Bluetooth device.

Using the Speakerphone

The iBTW41 must be ON and connected to a Bluetooth device in order to receive calls.

- Press the **Play/Power/Speakerphone Button** to accept an incoming call.
- Press and hold to end or ignore a call.

Using Voice Commands

The device must be ON and connected to a Bluetooth device to use voice commands.

- Press and hold the **Play/Power/Speakerphone Button** for 2 seconds to activate Siri or Google Assistant.

Charging Devices Via USB Port

- Connect the standard size and/or a USB cable (not included) to the USB port on the back of the unit and connect the other end to the charging port on your device.
- Monitor the charging on your device. Some devices use a proprietary charging method and will not charge using the USB port. If this happens, you must charge your device using the charger that came with it.

NOTE: Unit must be plugged into working outlet to charge device.

Battery Back-Up

The unit comes with a CR-2450 back-up battery installed to provide continuous alarm operation and clock settings in the event of a temporary power failure. Remove the battery pull tab before use. When the battery icon on the clock display is flashing, it is time to replace the back-up battery. The battery compartment is located on the bottom of the unit.

- Make sure the AC adapter is connected, or you will lose your time and alarm settings during battery replacement.
- Use a Phillips screwdriver to open the battery compartment door.
- Remove the exhausted battery from the compartment and insert a CR-2450 battery, ensuring that the + side is facing you. Replace the compartment door. Do not over-tighten!

WARNING: Lithium batteries can explode or cause burns if disassembled, shorted, recharged, or used in fire or high temperatures. Do not dispose of batteries in a fire, sink, garbage, or other container or landfill. Heat, moisture, or fire will cause other safety risks. Store with hazardous or combustible materials. Store in cool, dry, ventilated area if you are collecting items and regulations for transport and disposal.

WARNING!

- Do not ingest the battery. Chemical Burn Hazard. This product contains a combustion cell battery. If the combustion cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep away from used batteries away from children. If the battery compartment does not close securely, take using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

CAUTION - RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INDETERMINATE TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Maintenance

- Place the unit on a level surface away from source of direct sunlight or excessive heat.
- Remove the plastic protective film from the clock display.
- Protect your furniture when playing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
- Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents such as bleach or similar materials can damage the surface of the unit.

IMPORTANT SAFETY INSTRUCTIONS

Please read all warnings, read and follow all instructions and keep these instructions handy for future reference.

- Do not use this product near water, and clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- This product should be situated away from heat sources such as radiators, heat registers, grilles or other heat-producing appliances that produce heat.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this product during lightning storms or when unused for long periods of time.
- Damage Prevention - This product should be serviced by qualified service personnel only.
 - Do not have objects or liquid have spilled into the enclosure.
 - The unit has been designed for rain. The unit has been designed for the following use conditions:
 - The unit will not be subjected to rain. The unit will not be subjected to rain.
 - No water, flames, sparks, such as lighted candles, should be placed on this product.
 - Attention should be drawn to the environmental aspects of battery disposal.
 - This product is not suitable for use in tropical and/or moderate climates.
 - Moisture: To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
 - Do not dispose of batteries in the household trash or fire.
 - The means plug of power adapter is used as the disconnect device, it shall remain readily accessible.

FCC INFORMATION

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

The device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Important: Changes to modifications that are not authorized by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION - RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INDETERMINATE TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This equipment generates, uses and can radiate radio frequency energy and, if not used and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur. If you experience interference while using this equipment, you may wish to take one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio technician for help.

The equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

IC Statement

This equipment complies with IC RSS-322 radiation exposure limits set forth for an uncontrolled environment.

The device generates, uses and can radiate radio-frequency energy and, if not used in accordance with the instructions, may cause interference to radio communications. However, there is no guarantee that interference will not occur. If you experience interference while using this equipment, you may wish to take one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio technician for help.

The equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

1 Year Limited Warranty
 For warranty and full instructions, visit www.ihome.com.hk/support

© 2020 iHome Technologies, Inc. All rights reserved.
 Shenzhen · VIC · www.ihome.com

8796-10886-003

Printed in China