

iBTW750 QSG (English)  
 Size: 420 x 160 mm (folded: 140 x 160 mm)  
 Color: 4C + 4C  
 Material: 260gsm Art Card, 2C + 2C  
 Mar 29, 2019



FRONT

PMS185C

**iHome**

**Color Changing  
 Stereo Speaker System  
 with Wireless Charging**  
 Model: iBTW750

**QUICK START GUIDE**

In the Box » iBTW750 » USB Charging Cable » USB Wall Adapter

**1 Power Button**

Press and hold for 2 seconds to power unit ON or OFF.

**2 Battery/Charge indicator**

Solid red = charging  
 Solid green = fully charged

**3 USB Charge Port**

Connect included USB cable to charge iBTW750 for portable use.

**4 Bluetooth Indicator**

Fast blinking blue = pairing  
 Slow blinking blue = linking  
 Solid blue = paired to device

**5 Bluetooth Button**

Press and hold for 2 seconds to pair a device with the unit.  
 Press to answer incoming call.  
 Press and hold for 2 seconds to end or decline call.

**6 Color Change Button**

Press and release to cycle through color change modes: slow fade, fast change, favorite color, pulse to music, preset pulse mode and off.

**7 Pinhole Reset Port**


If unit fails to respond properly, insert a paper clip or similar tool into the Reset Port on the back of the unit.

**8 Wireless Charging USB Port**

Connect included USB cable for wireless charging operation.

**CHARGE UNIT  
 BEFORE USE  
 ABOUT 7 HOURS**

BACK

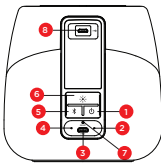

**QUICK SET-UP**

**Connecting to Power**



» Connect the USB plug to the USB wall adapter, then plug the adapter into a working power outlet.



» Next, plug the micro USB connector to the micro USB port located under the button controls.



» Now plug the other micro USB connector to the micro USB port located near the top of the unit.

» Once connected, the unit should match the drawing below:



**BATTERY LEVEL**

» A voice prompt will automatically announce when the battery level is very low.  
 » Press and hold the **Color Mode Button** to hear current battery level announcement.

Contact Us: 1-800-288-2792

For full warranty and full instructions visit: [www.ihome.com/support](http://www.ihome.com/support)

**BLUETOOTH PAIRING**

**Pairing and Playing Audio**



» Press and hold the **Power Button** for 2 seconds to power on the unit.



» Press and hold the **Bluetooth Button** for 2 seconds to enter pairing mode.



 
» Select 'iHome iAV5' on your Bluetooth device'. You will hear a "Connected" announcement once your device is paired. Use your Bluetooth device to navigate/control audio.

**WIRELESS CHARGING**

**Charging Rest**



**Charging LED**



This unit will wirelessly charge Qi compatible wireless charging phones when connected to a power outlet. Place Qi compatible device face up on **Charging Rest**. Check the **Charging LED** on the iBTW750 for charging status:

**Solid Blue LED:** Device is charging properly.

**Solid Red LED:** Device is fully charged.

**Flashing Red LED:** Charging error. Reposition device.

» Note: The LED may continue to glow solid blue when iOS devices are fully charged.

**CAUTION:** Remove metal protective or magnetic case from phone before charging. When charging phone, do not place magnetic-stripped or other metal objects on the charger. Doing so could damage the object or this unit. Qi compatible phones with metallic looking finishes will charge normally.

» For best results, clean the rubber pads on the charging rest regularly, using a damp cloth.

BACK

**IMPORTANT SAFETY INSTRUCTIONS**

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read and follow all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

- Water and Moisture - The unit should not be used near water. For example near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
- Ventilation - The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.
- Heat - The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
- Power Sources - The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance. Only use the AC adapter that came with the unit.
- Power-Cable Protection - Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.
- Cleaning - The unit should be cleaned only using a warm damp cloth. Do not use solvents, etc.
- Objects and Liquid Entry - Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.
- Attachments - Do not use attachments not recommended by the product manufacturer.
- Lightning and Power Surge Protection - Unplug the unit from the wall socket and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.
- Overloading - Do not overload wall sockets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- Damage Requiring Service - The unit should be serviced by qualified service personnel when:
  - the power supply cable or plug has been damaged,
  - objects have fallen into or liquid has been spilled into the enclosure,
  - the unit has been exposed to rain,
  - the unit has been dropped or the enclosure damaged,
  - the unit exhibits a marked change in performance or does not operate normally.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- The power adapter, used as the disconnected device. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.
- Periods of Nonuse - If the unit is to be left unused for an extended period of time, such as a month or longer, the backup battery should be removed from the unit to prevent damage or corrosion.
- Servicing - The device should not be attempted to be serviced beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.
- Attention should be drawn to the environmental aspects of battery disposal.
- This product is suitable for use in tropical and/or moderate climates.
- WARNING: To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
- CAUTION - Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- The mains plug of power adaptor is used as the disconnect device, it shall remain readily operable.

Mar 29, 2019

**FCC Information**

**FCC Radiation Exposure Statement**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

**This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.**

- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.

**CAN ICES 3(B) / NMB-3(B), CAN RSS-216/CNR-216**

**Canada Statement**

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- This device may not cause interference.
- This device must accept any interference, including interference that may cause undesired operation of the device.

**L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:**

- L'appareil ne doit pas produire de brouillage.
- L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

**WARNING/DISPOSAL OF UNIT**

- DO NOT attempt to charge the battery. Doing so will void the warranty and could cause injury and damage to your device. To dispose of the unit, follow the instructions below:
- Never dispose of used batteries/electronics with ordinary solid wastes, since they contain toxic substances.
  - Always dispose of used batteries/electronics in accordance with the prevailing community regulations.
  - Many electronics retailers now recycle batteries and other electronic components at no charge.
- GENERAL BATTERY PRECAUTIONS**
- Never use or charge a battery if it appears to be leaking, discolored, deformed, or in any way abnormal.
  - Never disassemble the unit or attempt to remove battery as that could cause leakage of alkaline solution or other electrolytic substances.
  - Avoid charging a rechargeable battery when the temperature is not within 5°C - 35°C (41° - 95° Fahrenheit).
  - Never expose a battery to any liquid.
  - Never expose a battery to excessive heat such as direct sunlight or fire. Never use a battery pack in an unventilated vehicle where excessive internal temperatures may be encountered.
  - Always keep batteries out of the reach of infants and small children.

iBTW750-190329-A

Printed in China

Mar 29, 2019

Mar 29, 2019

**iHome**

For warranty and full instructions visit: [www.ihome.com/support](http://www.ihome.com/support)  
 © 2019 SDI Technologies, Inc. All rights reserved.  
 Questions? Visit [www.ihome.com](http://www.ihome.com) or call 1-800-288-2792 Toll Free