

iHome



Model: iM14

Jumbo Snooze Bar Alarm Clock with USB Charging



instruction manual


 
 
 
Questions? Contact Customer Service at 1-800-288-2792

Table of Contents

What's in the Box	1
Product Care	1
Controls Overview	2
Display.....	3
Set Up	3
Setting the Clock	4-6
Setting and Using the Alarm	7-10
Using the Aux-in Mode	11
Using the Button Lock Feature.....	11
Charging Devices Using the USB Ports	12
Lithium Battery Warning	12
Installing and Replacing Backup Battery.....	13
Important Safety Instructions.....	14
Troubleshooting.....	15
Warranty Information	16

What's in the Box

 This product ships with the following items. Make sure all are present.

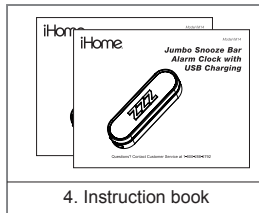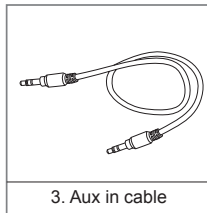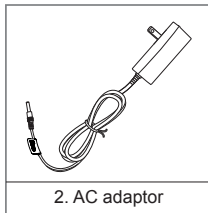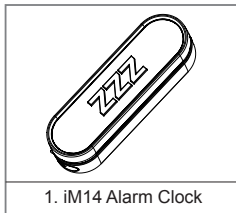


Product Care


- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
- Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as thinner or similar materials can damage the surface of the unit.

Controls Overview

 
Top Panel

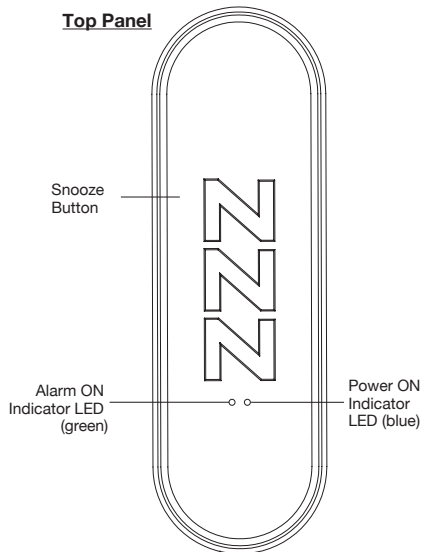


Left Panel

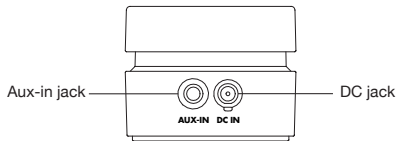 


Bottom Panel

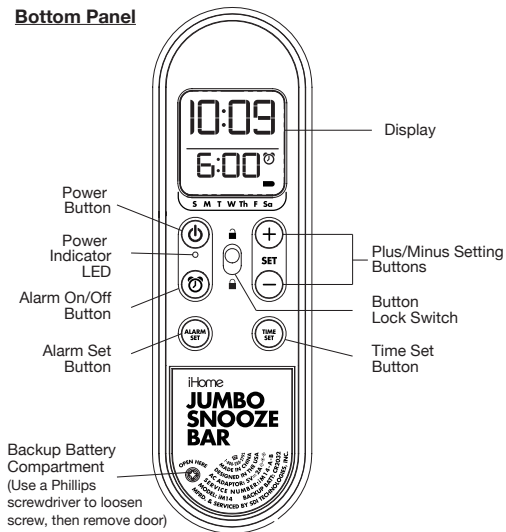 

Right Panel

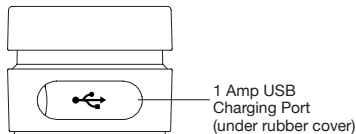 


Display

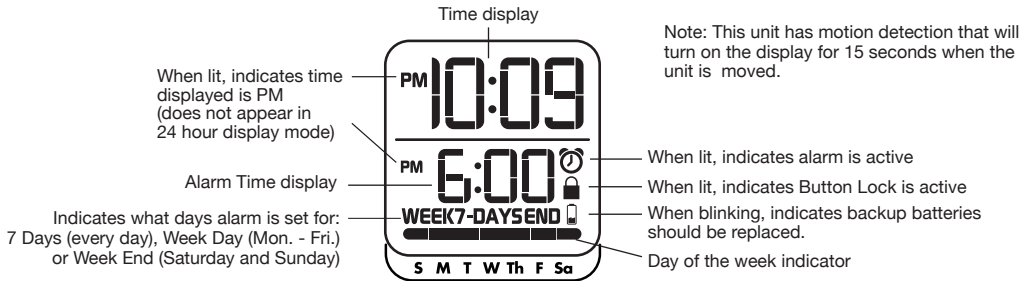 

Set Up

Connecting to Power Source

 Connect the AC adaptor to the DC jack located on left end of the unit. Connect plug into a working wall outlet that is not controlled by a wall switch. The display on the unit will show 12:00 PM. **The unit does not operate on battery** (the battery back up system maintains clock settings during power failures). **Remove battery pull tab before operation.**

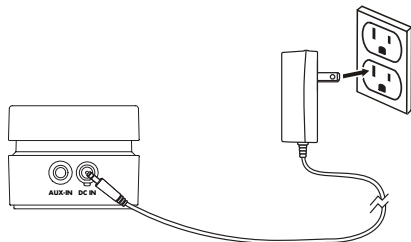


Setting the Clock

1




Press and hold the **Time Set Button** until the hour flashes on the display and a beep sounds.

 2

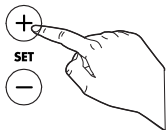


Press and release the **Plus or Minus Setting Button** as needed to set the correct hour (hold for faster setting).
NOTE: The PM indicator will light when the time is set for PM. There is no AM indicator.

 3

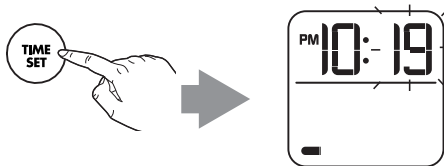


Press and release the **Time Set Button** to confirm hour setting. The minutes will flash on the display.

 4

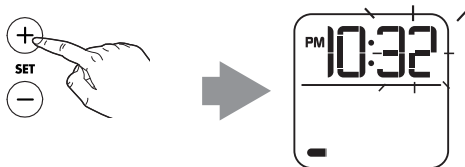


Press and release the **Plus or Minus Setting Button** as needed to set the correct minutes (hold for faster setting).

 5

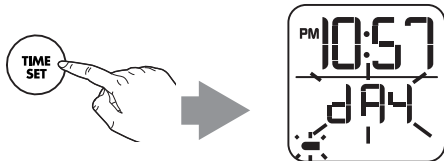

Press and release the **Time Set Button** to confirm minute setting. “day” and current day of the week indicator will flash on the display.

 6



Press and release the **Plus or Minus Setting Button** as needed to set the correct day of the week by matching the day of the week indicator to the day of the week printed below the display.

7



Press and release the **Time Set Button** to confirm clock setting. 2 beeps will sound to confirm clock setting is complete.

TIP



Press and release the **Alarm Set Button** when display is flashing during hour or minute setting to toggle display from default 12 hour display mode to 24 hour display.

Setting and Using the Alarm

1



Press and hold the **Alarm Set Button** until the hour and alarm icon flash on the lower half of the display and a beep sounds.

2



 
Press and release the **Plus or Minus Setting Button** as needed to set the desired alarm hour (hold for faster setting). *NOTE: The PM indicator will light when the alarm time is set for PM. There is no AM indicator.*

3



Press and release the **Alarm Set Button** to confirm hour setting. The minutes will flash on the display.

4




Press and release the **Plus or Minus Setting Button** as needed to set the desired alarm time minutes (hold for faster setting).

5



Press and release the **Alarm Set Button** to confirm alarm minute setting. The alarm days schedule indicator will flash on the display.

 6



Press and release the **Plus or Minus Setting Button** as needed to set the desired alarm schedule:
7 DAYS
(alarm will sound every day),
WEEK DAY
(alarm will sound Monday - Friday), or
WEEK END
(Alarm will sound Saturday and Sunday).

 
7




Press and release the **Alarm Set Button** to confirm alarm setting. 2 beeps will sound to confirm alarm setting is complete. The alarm icon, alarm time and alarm schedule will remain on the screen, indicating the alarm is armed.

TURNING ALARM ON OR OFF

Alarm is OFF




Alarm is ON

 

Press and release the **Alarm ON/OFF Button** as needed to arm or disarm the alarm, indicated by the alarm icon, alarm time and alarm schedule.

When on and set alarm time is within 14 hours, the green alarm LED on top the unit will light.

 RESETTING ALARM TO COME ON THE NEXT SET DAY

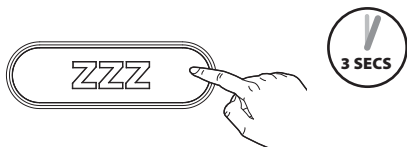


Press and hold the **ZZZ Snooze Button** for 3 seconds while alarm is sounding to silence the alarm and reset it to come on again at the next scheduled day. For example, if set to WEEK DAYS, if pressed on Friday it will be reset to wake you again on Monday.

USING SNOOZE




Press and release the **ZZZ Snooze Button** when alarm is sounding to silence the alarm for 9 minutes. After that the alarm will sound again. **NOTE:** All buttons except the **ZZZ Snooze Button** are disabled when the alarm is sounding.

 Using the Aux-in Mode



1 Connect one end of the included aux-in audio cable to the Aux-in jack located on the left end of the unit and the other end to the headphone or line-out jack of your audio device. Turn on your device and put it in play mode. The iM14 has auto detect and will turn on if audio is detected.

 2




If no audio is detected or unit does not turn on, press and release the **Power Button** to turn on the iM14. A blue Power LED below the Power Button and another on the top the unit will glow, indicating the unit is powered on.

3




Adjust the volume and track controls on the audio device as needed. When done listening, press and release the **Power Button** to turn off the iM14. The unit will turn off automatically if no audio is detected for 15 minutes

 Using the Button Lock Feature



The iM14 features a **Button Lock Switch** located on the bottom of the unit. Slide the switch to the Locked position to prevent accidental button presses. A lock icon will appear on the display. Slide to Unlocked to use buttons. Note that the **ZZZ Snooze Button** is NOT affected by the Button Lock Switch.

 Charging Devices Using the USB Port

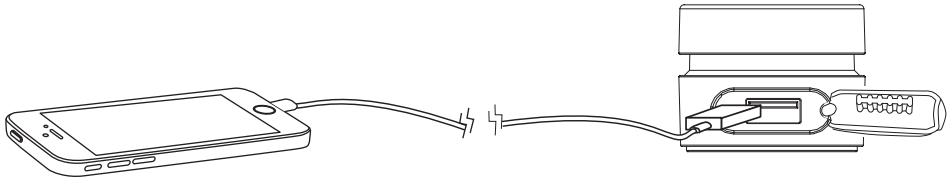

Connect a USB cable (not included) to the **1 Amp USB Charging Port** located under the rubber seal on the right end of the unit and connect the other end to the device you wish to charge. Monitor charging status on the device. Some devices require higher output USB. If device does not charge, use charger that came with device. **Unit must be connected to AC to charge devices via USB: it will not charge when operating on backup battery.**

 
 
 
Lithium Battery Warning

The backup battery in this unit uses is a Lithium battery

- Lithium batteries can explode or cause burns if disassembled, shorted, recharged, exposed to water, fire, or high temperatures & not handled appropriately
- Do not place loose batteries in a pocket, purse, or other container containing metal objects. Do not store with hazardous or combustible materials.
- Store in cool, dry, ventilated area. Keep Battery Pack away from moisture.
- Follow applicable laws and regulations for transport and disposal.

Installing and Replacing Backup Battery

Your new alarm clock includes 1 CR2032 button cell battery (installed). Pull the battery pull tab before using the unit. This battery backup system will maintain the time and alarm settings during a temporary power interruption. When the Battery Low Indicator on the lower right of the display is flashing, it's time to replace the battery.

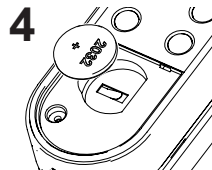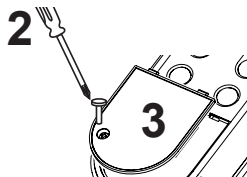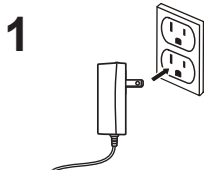

1. Keep unit connected to AC power when changing batteries to avoid losing your settings.
2. Use a Phillips screwdriver to loosen the screw on the battery door.
3. Remove the battery door.
4. Remove the exhausted battery. Install 1 fresh CR2032 battery. Make sure the + polarity marking is facing you.
5. Replace the battery door and tighten the screw. Do not over-tighten

NOTE: With battery installed, the display will remain and the clock will continue to run and maintain your alarm settings and the alarm will sound.

Do not dispose of battery in household trash. Make sure to dispose of battery in accordance with local regulations.

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. **Water and Moisture** – The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
2. **Ventilation** – The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.
3. **Heat** – The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
4. **Power Sources** – The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
5. **Power-Cable Protection** – Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.
6. **Cleaning** – The unit should be cleaned only as recommended. See the Maintenance section of this manual for cleaning instructions.
7. **Objects and Liquid Entry** – Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.
8. **Attachments** – Do not use attachments not recommended by the product manufacturer.
9. **Lightning and Power Surge Protection** – Unplug the unit from the wall socket and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.
10. **Overloading** – Do not overload wall sockets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
11. **Damage Requiring Service** – The unit should be serviced by qualified service personnel when:
 - A. the power supply cable or plug has been damaged.
 - B. objects have fallen into or liquid has been spilled into the enclosure.
 - C. the unit has been exposed to rain.
 - D. the unit has been dropped or the enclosure damaged.
 - E. the unit exhibits a marked change in performance or does not operate normally.
12. **Antenna** – Do not connect an external antenna to the unit (other than that provided).
13. **Periods of Nonuse** – If the unit is to be left unused for an extended period of time, such as a month or longer, the power cable should be unplugged from the unit to prevent damage or corrosion.
14. **Service** – The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.

Troubleshooting

1. The unit does not power ON.

The unit is not connected to AC outlet, the AC outlet has no power, or is controlled by a wall switch that is "OFF". Check AC outlet and wall switch.

2. Alarm does not come on?

The alarm time AM or PM incorrectly set, Alarm was OFF, alarm is not scheduled to come on, etc. Check alarm settings.

3. Low battery indicator is flashing.

Battery has not been installed correctly in the battery compartment or the battery may be weak or exhausted. Try replacing battery.

4. USB port not charging devices.

Unit is not connected to working AC outlet, USB cable is faulty or not properly connected or device requires higher amperage USB port. Check connections, and device manual to determine if device requires greater than 1 Amp USB port.

5. Unit shuts "Off" unexpectedly.

AC outlet unit is connected to is controlled by a wall switch that is turned OFF. Check mode on unit. Check wall switch. Turn unit on with Power Button.

6. Unit doesn't respond (locked up or frozen).

The unit may need to be reset. To do so, unplug the unit from power source and remove the backup battery. Let unit stand for 2 minutes. Re-install backup battery and connect unit to power source. You will need to reset the clock, alarm and any other settings.

FCC Information

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-3 (B)/NMB-3(B)

Limited 90 Day Warranty Information

iHome Products, a division of SDI Technologies Inc. (hereafter referred to as SDI), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of ninety (90) days from the date of original purchase. Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service.

If service is required, please call Customer Service at 1-800-288-2792 to obtain a Return Authorization Number and shipping instructions.

Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner. This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgment and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI product

© 2015 SDI Technologies, Inc. All rights reserved.

Questions? Visit www.ihome.com

or call 1-800-288-2792 Toll Free