

iHome
HEALTH

POWERUVC PRO

**360° UV-C Sanitizer
with Bluetooth Speaker**



Model iUVBT1

 
QUESTIONS? visit www.ihome.com

WELCOME

Thank you for choosing the **PowerUVC PRO** from iHome. This superior quality UV-C LED light safely kills up to 99.9% of surface germs in under 3 minutes, without using harmful chemicals. The iUVBT1 is safe to use on everyday essentials including eyeglasses, smartphones, cosmetic tools, toothbrushes, and more. For more information about this and other iHome products, please visit www.ihome.com


WHAT'S IN THE BOX

1. PowerUVC PRO
2. AC power adapter
2. UV Shelf

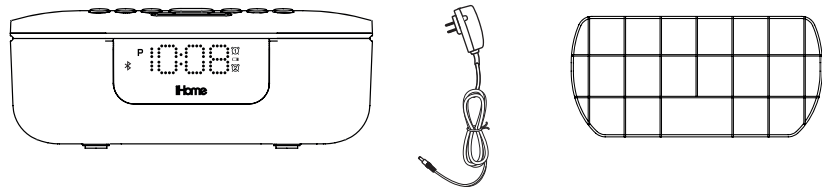


INSTALLING THE UV SHELF

 A shelf is provided to ensure optimal spacing between your items and the UV-C LEDs. Place the shelf inside the cabinet and firmly press it into the locking tabs.

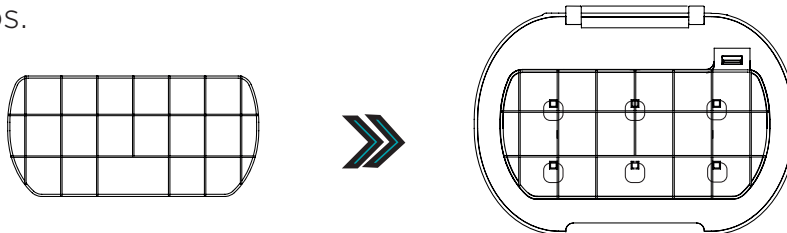


CONNECTING THE POWERUVC PRO

 Plug the included AC adapter into the DC jack on the back of the unit and connect the plug to a working outlet not controlled by a light switch.

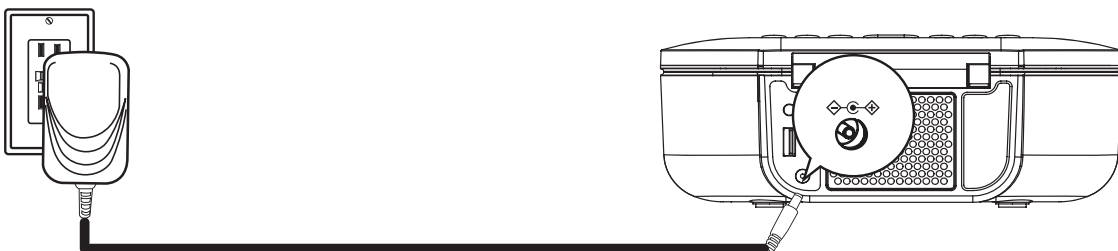


FEATURES & FUNCTIONS

 
TOP PANEL

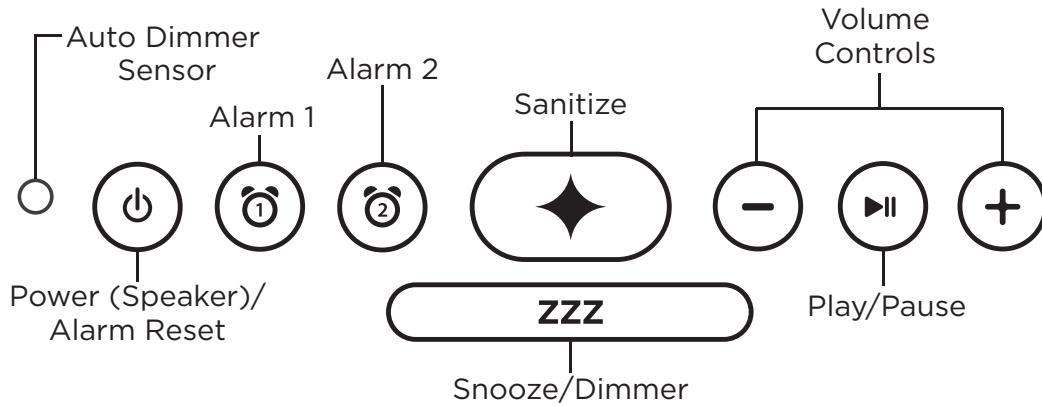


FRONT PANEL

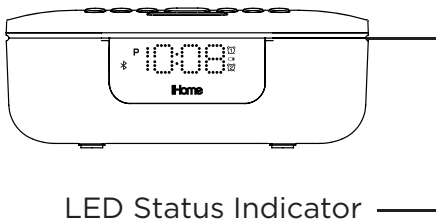 


BACK PANEL

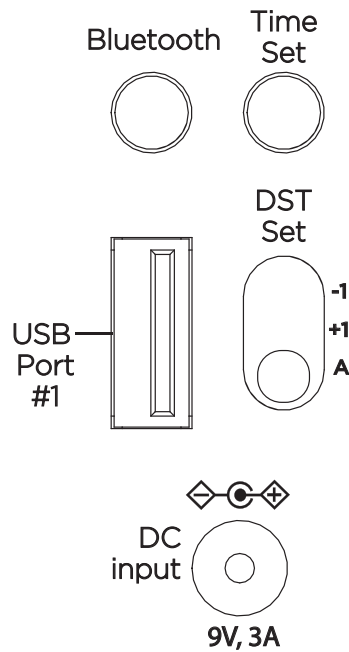 


BOTTOM PANEL

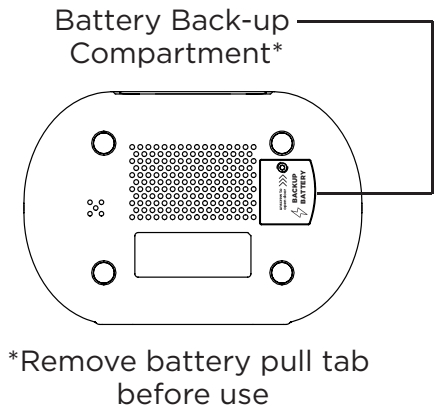 

UNDER THE LID

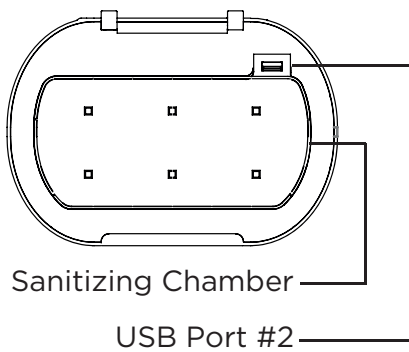 

DISPLAY

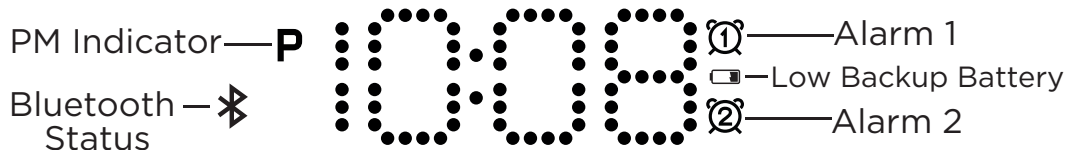 


USING THE SANITIZER

1. Make sure the unit is plugged into a working wall outlet. Lift the lid of the unit and place items on the shelf, making sure not to overlap items.



 2. Close the lid. Press and release the **Sanitize Button** ◆ to begin a UV sanitizing cycle. A countdown timer will display the remaining cycle time, LED status indicator (around the rim of the cabinet) will slowly blink, and a tone will sound when the cycle is complete.

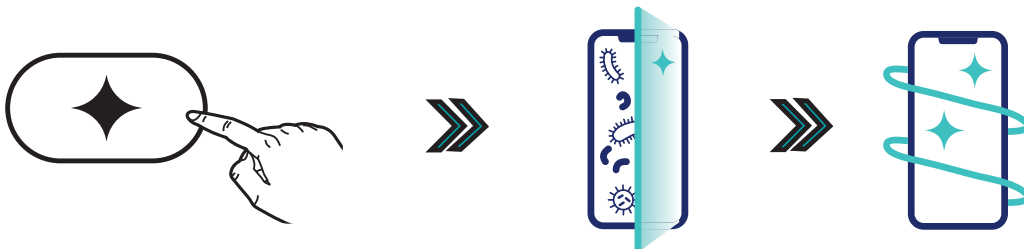

NOTES:

1. Features a built-in safety switch that will shut off the UV light whenever the lid is opened. Do not attempt to defeat the safety function and operate the unit with an open lid.
2. If the lid is opened during the UV sanitizing cycle, the timer will pause. Closing the lid within 1 minute will resume the cycle.
3. We recommend leaving the shelf in place while sanitizing your items. If items are too large, the shelf may be removed. In those cases we recommend flipping the items over and sanitizing a second time for optimal effect.
4. To cancel a sanitizing cycle, press the **Sanitize Button**.

SETTING THE TIME

1. Press and hold the **⌚ Time Set Button** located on the back of the unit for 2 seconds until the clock display flashes and a beep sounds.
2. Press the **-** or **+** **Buttons** to adjust the clock to the current time (hold for rapid setting). Make sure you set the correct AM/PM time. The PM indicator appears to the left of the display; there is no AM indicator.
3. To toggle the clock display between standard 12 hour time and 24 hour (“military”) time display, press the **⌚ Alarm** or **⌚ Alarm Button** while the display is flashing during time setting.
4. Press and release the **⌚ Time Set Button** to confirm the current time setting. The YEAR will flash on the display. Press the **-** or **+** **Buttons** to set the correct year.
5. Press and release the **⌚ Time Set Button** to confirm the current year setting. The month will flash on the display. Press the **-** or **+** **Buttons** to set the correct month (hold for rapid adjustment).
6. Press and release the **⌚ Time Set Button** to confirm the current month setting. The day will flash on the display. Press the **-** or **+** **Buttons** to set the correct day (hold for rapid adjustment).
7. Press and release the **⌚ Time Set Button** to confirm settings. 2 beeps will sound to indicate time setting mode is complete.

DAYLIGHT SAVINGS (DST) SWITCH

This unit has a **DST switch** on the back of the unit to adjust the time for daylight saving time and standard time. By default, it is set to Auto and will automatically adjust the time at the start and end of daylight saving time. If you wish to adjust manually, slide the switch to +1 to add one hour or to -1 to subtract an hour.

SETTING AND USING ALARMS

This unit features dual alarms which can be set to different times and alarm sources. Each is set in the same way. Instructions are given as “Alarm Button”; use **Alarm 1 Button** or **Alarm 2 Button** to set respective alarms. **Note:** Each step must be completed while display is flashing or setting will time-out with any changes saved.

1. *Press and hold* the **Alarm Button** for 2 seconds until the alarm time display and alarm icon flash. A beep sounds.
2. Press the **-** or **+** **Buttons** to adjust the alarm time to the desired time (hold for rapid setting). Make sure you set the correct AM/PM alarm time. The PM indicator appears to the left of the display. (continued on next page...)

SETTING AND USING ALARMS (CONTINUED)

3. Press the **Alarm Button** to confirm the alarm time setting. The alarm schedule will flash: 7 (every day), 5 (weekdays) or 2 (weekend only). Press the **-** or **+** **Buttons** to select the desired alarm schedule.
4. Press the **Alarm Button** to confirm the alarm schedule. The wake-to source will flash.
5. Press the **-** or **+** **Buttons** to select the desired wake-to alarm source: Bluetooth or Tone.
Wake to Bluetooth: You will wake to the currently linked Bluetooth device. If no device is detected, the alarm will default to the last tone selected.
Wake to Tone: Press the **Alarm Button** to confirm. Press the **-** or **+** **Buttons** to select the desired tone to wake to (Tone 1 -Tone 4).
6. Press the **Alarm Button** to confirm wake-to source. The alarm volume will flash.
7. Press the **-** or **+** **Buttons** to adjust the alarm volume.
8. Press the **Alarm Button** to confirm the alarm settings and exit alarm setting mode. 2 beeps will confirm alarm setting is complete. The alarm icon will remain on the display, to show the alarm is armed.

*To preview the current alarm time, press and release the **Alarm Button**.

TURNING THE ALARM ON/OFF

1. Press the **Alarm Button** to toggle the alarm ON and OFF, indicated by the related white alarm indicator.
2. When the alarm sounds, press the **Power/Alarm Reset Button** or the corresponding **Alarm Button (1 or 2)** to disable the alarm and reset it to come on at the same time the next day.

SNOOZE/DIMMER

Snooze: When the alarm is sounding, press the **ZZZ/Dimmer Button** to snooze the alarm for 9 minutes.

Dimmer: Press the **ZZZ/Dimmer Button** (when alarm is NOT sounding) to adjust the display brightness.

PROGRAMMABLE SNOOZE

To adjust the snooze duration:

1. Press and hold the **ZZZ/Dimmer Button**.
2. Use the **+ or - Buttons** to adjust the snooze duration from 1-29 minutes.

Press the **ZZZ/Dimmer Button** again to confirm.

AUTO DIMMER

This unit is equipped with a sensor that will automatically adjust the brightness of the clock display based on ambient light in your room. When the room is well lit, the display will adjust to Hi brightness for better visibility. In a dark room, it will dim to a lower brightness. You can adjust the “lower limit” of the Auto-dimmer to fit your personal preference of display brightness in a dark room.

The 3 options are:

- “**Auto 2**” - minimum brightness setting will be level 2
- “**Auto 1**” - minimum brightness setting will be level LO
- “**Auto 0**” - clock display will turn FULLY OFF in a dark room

To adjust Dimmer settings:

 
Press the **ZZZ/Dimmer Button repeatedly** to cycle through brightness levels: Auto 1, Auto 2, Auto 0, Hi, 3, 2, Lo, or OFF.

(Note: choosing **Hi, 3, 2, LO, or OFF** are fixed settings and will not auto-adjust.)


BLUETOOTH PAIRING

Make sure your device is 'discoverable' by turning on Bluetooth mode. The first time the unit is powered on, it will automatically enter pairing mode. To manually pair your Bluetooth device:

1. Press and hold the Bluetooth Button on the back of the unit for 2 seconds.

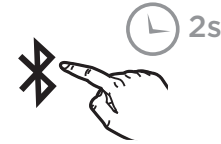

 2. Select 'iHome iUVBT1' on your device's Bluetooth menu to connect.

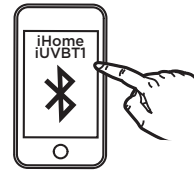

3. If pairing is successful, the Bluetooth indicator appears solid blue, indicating the unit is ready to play music.

 
(To reset Bluetooth settings, press & hold Bluetooth Button for 10 seconds.)

Playing Bluetooth Audio:

1. Press the **Play/Pause Button** on the unit to play or pause audio from your linked Bluetooth device.
2. Press the **-** or **+** **Buttons** to adjust the volume on the unit.

CHARGING DEVICES VIA USB


There are 2 USB Charging ports on this unit - each is 1A. To charge a device, connect the standard size end of a USB cable (not included) to either USB Port #1 (back of unit) or USB Port #2 (inside sanitizing cabinet). Connect the other end to the charging port on your device. Monitor the charging on your device. Some devices use a proprietary charging method and will not charge using the USB port. If this happens, you must charge your device using the charger that came with it.

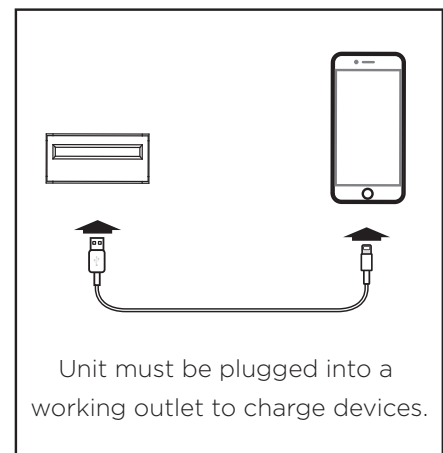

BATTERY BACK-UP

The unit comes with a CR-2450 back-up battery installed to maintain clock settings in the event of a temporary power failure. Remove the battery pull tab before use. When the battery icon on the display is flashing, it is time to replace the back-up battery.

 1. Make sure the AC adapter is connected, or you will lose your time and alarm settings during battery replacement.
2. Use a Phillips screwdriver to open the battery compartment door.
3. Remove the exhausted battery from the compartment and insert 1 CR-2450 battery, checking that the + side is facing you. Replace the compartment door. Do not overtighten.

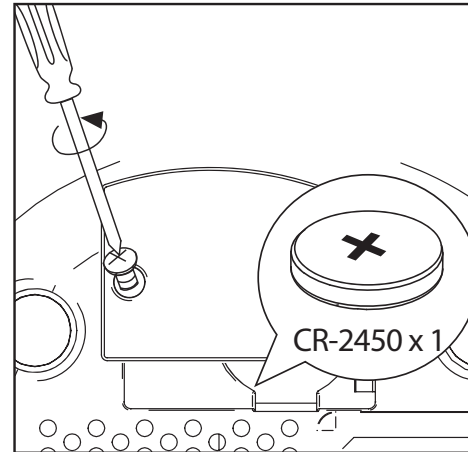

WARNING: Lithium batteries can explode or cause burns if disassembled, shorted, recharged, exposed to water, fire, or high temperatures. Do not place loose batteries in a pocket, purse, or other container containing metal objects, mix with used or other battery types, or store with hazardous or combustible materials. Store in cool, dry, ventilated area. Follow applicable laws and regulations for transport and disposal.

- Do not ingest the battery, Chemical Burn Hazard. This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Maintenance + Caring For Your Device

- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Remove the plastic protective film from the clock display.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
- Should the casing of your device become soiled, you may wipe down with a moist cloth.
- Do not immerse the device into water or any cleaning solvents.
- Do NOT use gasoline, benzene, thinner, harsh cleaners, etc on and/or in the unit while cleaning, as they may damage the product. NEVER use alcohol or other solvents.

IMPORTANT SAFETY INSTRUCTIONS

Please heed all warnings, read and follow all instructions and keep these instructions handy for future reference.



WARNING - DO NOT ATTEMPT TO OPERATE THIS DEVICE WITH THE LID/TOP OPEN. The device was designed to shut off automatically when the lid/top is open. It is important NOT to defeat or tamper with this safety feature as UVC light can cause damage to eyesight and skin.

All users should be alerted to the potential hazards indicated by the product safety labeling on the unit and these instructions.

WARNING - Use this device only for its intended use as described in this manual. If the device is not used in the manner specified, the protection provided by the equipment may be compromised. Always place device on a flat, smooth surface, in a horizontal position for operational use.

WARNING - KEEP OUT OF REACH OF CHILDREN. This device is not a toy and is not intended to be used by children.

ATTENTION: Use only the supplied power adapter. This product must only be supplied at safety extra low voltage corresponding to the marking on the appliance.

ATTENTION: Prolonged or excessive exposure to UV-C light may degrade and discolor fabrics, plastics and other non-metallic materials. Keep operation away from strong magnetic fields.

- Do not look directly at the UV-C source.
- Device is intended for indoor use only, do not use outdoors or on wet surfaces.
- Device should be protected from the elements and from temperatures below freezing.
- Do not operate/drop near water or while bathing or swimming, do not handle the device with wet hands.
- Only use as intended. Use according to this manual's instructions without tampering or modifying the device in any way.
- Do not alter the construction or design. Do not remove safety labels, markings or devices.
- Do not use device for other than its intended purpose, as described in the manual.
- Do not operate if any damage to the unit is visible or suspected, such as after being dropped.
- Do not use if charging cable/cord is damaged.
- Keep the cable/cords and device away from heated surfaces.
- Close supervision is necessary when any appliance device is used by or near children and people with special needs.
- Do not operate in the presence of explosives and/or flammable fumes, smoke or liquids.

Disclaimer: This product is not intended to diagnose, treat, cure or prevent any disease or medical condition. The information provided herein is not to be construed as a medical diagnosis or medical advice. No medical claims are implied or intended with the sale of this device. Purchaser accepts responsibility for correct and proper use of device.

LIMITED ONE YEAR WARRANTY

iHome Products, a division of SDI Technologies Inc. (hereafter referred to as SDI), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase. Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service.

If service is required, please contact Customer Service at ihome.com/support/contact to obtain a Return Authorization Number and shipping instructions. A copy of the sales receipt is required to validate in-warranty coverage.

Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Your acknowledgment and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI product.