

START GUIDE


quickstart guide for docking with

SMARTSLIDE




DROP
CABLE THROUGH

1

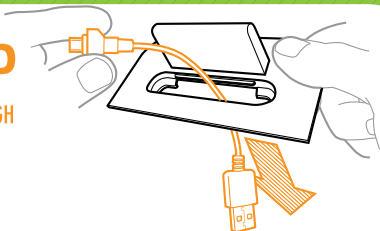


ROTATE
CONNECTOR TO
FIT YOUR PHONE

2

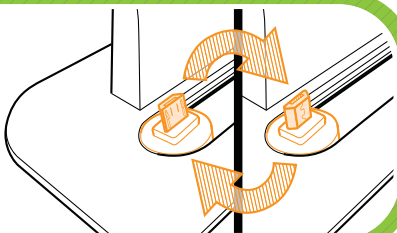

3

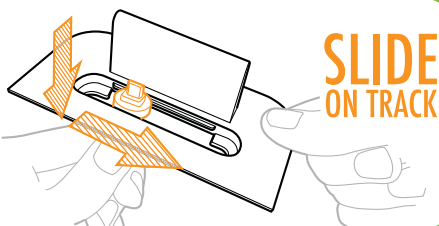

SLIDE
ON TRACK

4



**PLUG IN AND
WRAP**
YOUR CORDS

5

SNAP
AND DOCK

