

QUICK GUIDE TO PAIRING YOUR MAC WITH THE iDM12




NOTE: Pairing operation may vary depending on your operating system and the Bluetooth firmware version on your computer.


- 1) Make sure the **Bluetooth switch** on the back of the iDM12 is in the Bluetooth (left) position.
- 2) Press and hold the **Power Button** to turn on the iDM12 (release when green light appears).
- 3) To put the iDM12 in pairing mode, press and hold the **Play/Pause/Pairing Button** located on top of the unit. Release when the amber light on the iDM12 flashes and two beeps sound.
- 4) Turn on Bluetooth functionality on your Mac and make it discoverable: System Preferences>Hardware>Bluetooth.




- 5) Choose “add a new Bluetooth device” or “setup new device”. The Bluetooth Setup assistant window will appear. Click Continue.

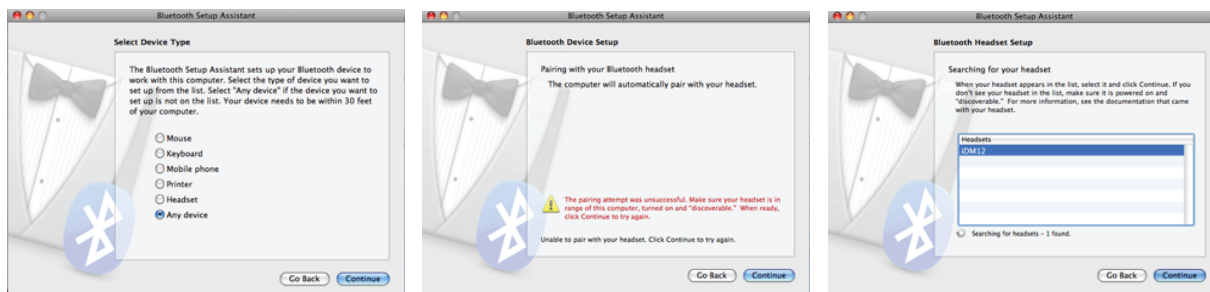

- 6) Depending on the version of your operating system, you may be asked to select a device type, or it may search automatically. If asked, select “Any Device” (or Headset) and click Continue. Your Mac will search for the iDM12. When the iDM12 appears in the list of devices, highlight it and click Continue. It will begin configuration. If you get an error message similar to the one in the center above, use the Go Back button and select Headset from the device menu.

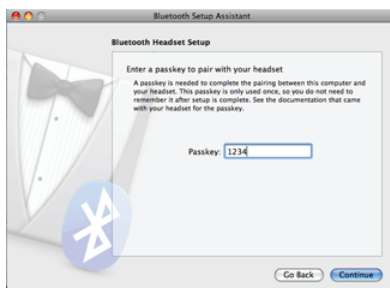

- 7) If asked for a passkey, enter **1234**.

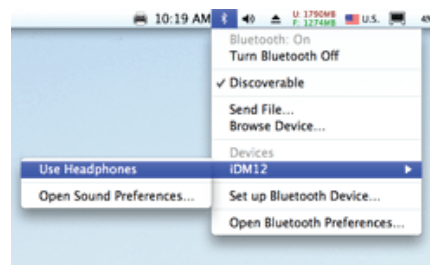

- 8) Once you are successfully paired with the iDM12, select Use as Audio Device (or Use as Headset, etc). You can then play audio from your Mac to the iDM 12.

NOTE: If the pairing attempt fails or times out (after 3 minutes), the iDM12 will shut off. Power it on again and start pairing procedure again (see steps 2 - 7)