

iHome

zenergy  
AROMA



**Model iZABT50**

Aromatherapy Speaker with Lighting

---

QUESTIONS? visit [www.ihome.com](http://www.ihome.com)


# WELCOME

Thank you for choosing the iZABT50 Zenergy Aroma from iHome. This user guide will get you up and running quickly. For more information about this and other iHome products, please visit [www.ihome.com](http://www.ihome.com). Please read this guide and all safety information prior to use.

## GETTING STARTED

This unit ships with the following items. Please check to see that all items are present.

1. iZABT50 aromatherapy speaker
2. Remote control with battery
3. 100-240V Universal AC power adapter
4. 3 replaceable aroma pads
5. 1 5ml bottle of 100% pure lavender essential oil

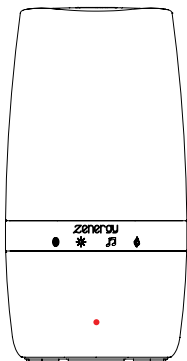

1. iZABT50 speaker



2. remote control



3. AC adapter




4. 3 aroma pads




5. 5mL essential oil bottle

# FEATURES & FUNCTIONS

## FRONT PANEL

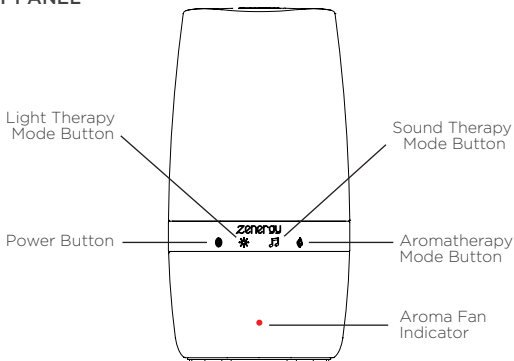

## BACK PANEL

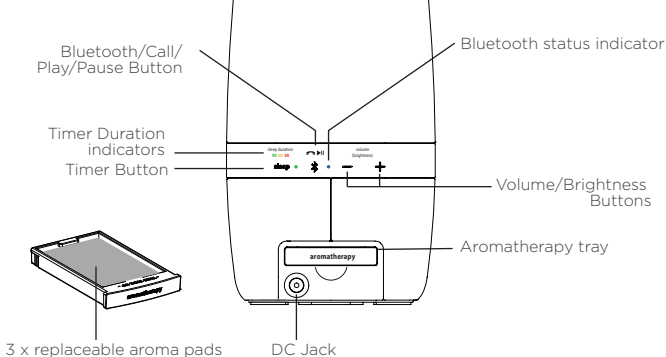

# REMOTE CONTROL



## Power Button

- Press to turn unit ON or OFF



## Aromatherapy Fan Button

- Press to turn fan on high, low or OFF



## Timer Button

- Press to sleep to current mode(s) for 30, 60 or 90 minutes (or turn timer OFF)



## Light Therapy Mode Button

- Press to cycle through light therapy modes



## Light Therapy Brightness Buttons

- Press to adjust brightness up or down



## Sound Therapy Mode Button

- Press to cycle through sound therapy modes



## Volume Adjust Buttons

- Press to raise or lower sound therapy or Bluetooth audio volume



## Play/Pause Button

- Press to play or pause Bluetooth audio



## Track Buttons

- Press to skip to previous or next track

Some features and functions work differently when accessed directly on the unit from when accessed from the remote control.


## REPLACING THE REMOTE CONTROL BATTERY

Your Remote comes with one CR2032 battery which is installed.

### REMOVE THE BATTERY PULL TAB BEFORE USE.


When the range of the remote seems reduced or if it ceases to work properly, it's time to replace the battery.

1. Press point of a pin or paperclip firmly into the hole by the battery compartment cover on the rear of the remote control to release the cover.
2. Slide battery compartment cover off. Remove old battery.
3. Place new CR2032 in battery well as shown (make sure + side is facing upwards).
4. Replace battery cover.

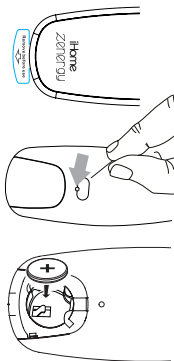

## CONNECTING THE IZABT50

Plug the include AC adapter into the DC jack on the back of the unit and connect the plug to a working outlet not controlled by a light switch.

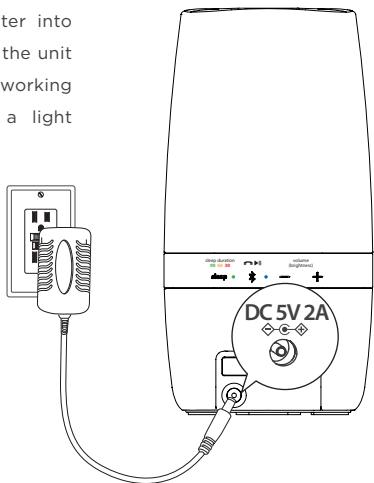


# AROMATHERAPY MODE



This unit comes with an Aromatherapy chamber located on the back. Load the aroma tray with a replaceable aroma pad and add drops of essential oils. When the fan is turned on you will relaxing aromas to help you sleep and feel great.

## LOADING THE AROMA TRAY

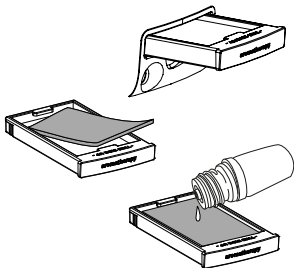1. Pull out the aroma tray located on the back of the unit.
2. Place a replaceable aroma pad into the aroma tray.
3. Place 3-4 drops of your preferred essential oil on the pad.
4. Replace tray in unit.



## RUNNING THE AROMATHERAPY FAN

1. Press and release the  **Power Button** to turn on the iZABT50.
2. Press and release the  **Aromatherapy Button** to turn on the aroma therapy fan at high setting. Press again to turn fan to low, and once again to turn the aroma fan OFF. **CAUTION: DO NOT RUN FAN UNATTENDED**

## WARNING ABOUT INCLUDED 100% PURE LAVENDER ESSENTIAL OIL:

- Combustible Liquid. Keep away from flames and hot surfaces-No smoking
- Keep out of the reach of children and pets
- For external aromatherapy use only
- Not for topical use, may irritate sensitive skin
- Avoid contact with eyes and mucous membranes
- Do not use during pregnancy
- Any adverse reaction or ingestion, seek medical attention
- Store in a cool, dark location, away from heat sources

NOTE: These statements reflect the safe use of the Lavender Essential Oil supplied with your Zenergy product only. As with any replacement essential oil, please read the manufacturers safety statements before use.

# LIGHT & SOUND THERAPY MODES

## LIGHT THERAPY MODE

Circadian rhythms, or our internal clocks, are linked to changing wavelengths of light throughout the day. Color Light Therapy simulates these wavelengths, triggering subtle biological responses that can help improve sleep, energy, and mood. Light Therapy mode includes 4 separate Light Therapy patterns to help you feel great.


1. Press the ✳ **Light Therapy Button** to access Light Therapy mode. Continue to press as needed to cycle to each mode:

<b>Candle</b>	Provides the ambiance of a calming LED candle effect to enhance any home environment
<b>Breath</b>	Inhale and hold with the amber light and exhale with the red, matching your breath to this timed pattern can lower your heart rate and calm your mind
<b>Calm</b>	Red-toned lights calm the mind at night and stimulate the production of melatonin, helping to prepare the body for sleep
<b>Energy</b>	Swirling blue-toned lights inhibit melatonin, increase morning alertness, and energize the mind
<b>Aurora</b>	A swirling spectrum of colors creates a beautiful atmosphere for day or night mood lighting <i>(not recommended for sleep)</i>
<b>Glow</b>	A gentle fading spectrum of solid colors creates a beautiful atmosphere for day or night mood lighting <i>(not recommended for sleep)</i>
<b>Favorite Color</b>	Select the current color
<b>Off</b>	Turn Light Therapy OFF

2. Press the - and + **Buttons** to adjust the intensity of the light to suit your mood and room conditions
3. **Press and hold the Light Therapy Button** for 2 seconds to exit light therapy mode. Press the Light Therapy Mode Button again to resume mode at the last used light pattern.

## SOUND THERAPY MODE

Distracting noises or a racing mind can make it hard to sleep at night or focus during the day. Sound Therapy uses specially recorded and engineered sounds to cancel out these distractions and allow your mind to calm. Sound Therapy mode includes 6 separate Sound Therapy presets to help you feel great.

1. Press the  **Sound Therapy Button** to access Sound Therapy mode. Continue to press to cycle to each mode:

<b>Zen</b>	A tonal melody in frequencies that mimic the Delta brainwaves of a mind in meditation or healing
<b>Ocean</b>	Authentic, digitally recorded ocean sounds
<b>Storm</b>	Authentic, digitally recorded storm and rainfall sounds
<b>Nature</b>	Authentic, digitally recorded springtime woodland sounds
<b>White Noise</b>	A low-toned noise frequency, like a fan, which helps to muffle background noises to promote relaxation and sleep
<b>Heart Beat</b>	Listening to a relaxed heart beat encourages your own heart beat to slow to match it, alleviating stress
<b>Off</b>	Turn Sound Therapy OFF




2. Press and release the **-** or **+** **Volume Buttons** to adjust speaker volume.
3. *Press and hold* the **Sound Therapy Button** for 2 seconds to exit sound therapy mode. Press the **Sound Therapy Button** again to resume at the last used sound preset.



# BLUETOOTH MODE

## PAIRING

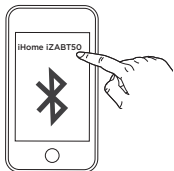

Pairing establishes a unique communication connection between the unit and your Bluetooth device. Once paired, you will be able to stream audio wirelessly to the iZABT50.



1. Turn on your Bluetooth device and make it “discoverable” by turning on Bluetooth mode (check in Options or Settings).
2. Press and release the **Power Button** to turn on the iZABT50.
3. *Press and hold* the **Bluetooth Button** (located on back of the unit) for 2 seconds. 2 beep tones will sound and the indicator light by the Bluetooth button will flash blue while the unit attempts to pair. “iHome iZABT50” should appear on your device’s menu. Select “iHome iZABT50” on device to begin/complete pairing. If your device asks for a password, enter 1234 on the keyboard of your device. A tone will sound and the blue indicator will glow solid. If no device is paired within 3 minutes, the unit will revert to its previous state.

The next time you power on the unit press the Bluetooth Button to re-link with the previously paired device as (long as that device is still within range, about 33 feet). To clear/reset Bluetooth, press and hold the Bluetooth button for 10 seconds until you hear a long beep. *Note:* Reset is disabled in Sound Therapy mode.

## PLAYING AUDIO VIA BLUETOOTH

1. Press and release the  **Power Button** to turn on the iZABT50.
2. Press and release the  **Call/Play/Pause Button** to play or pause audio. Press 2x to skip to the next song, press 3x to return to the start of the current track or go to the previous track (depending on where you are in the track).
3. Press and release the **-** or **+** **Volume Buttons** to adjust speaker volume. You can also adjust the output volume on your Bluetooth device.
4. When done listening, press and release the **Power Button** to power off the unit.

## USING THE SPEAKERPHONE

Unit must be powered ON and paired with a Bluetooth-enabled phone to use the speakerphone feature. When a call is received, current audio is paused. Speakerphone cannot be accessed via remote control.

Press and release the  **Call/Play/Pause Button** to answer a call.

*Press and hold* to ignore or end a call.

## TIMER MODE

Timer mode lets you sleep to any combination of light and sound therapy or Bluetooth audio for the set timer duration. The light and sound levels will be gradually decreased over time until the unit shuts off.

Press the **Timer Button** as needed to cycle to the desired duration: 90, 60, 30 minutes (and Off) shown by the lit sleep indicators on the back of the unit. Timer mode is inactive when no sleep timer indicator is lit.

# MAINTENANCE

- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
- Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents such as thinner or similar materials can damage the surface of the unit.

# TROUBLESHOOTING

<b>SYMPTOM</b>	<b>POSSIBLE</b>	<b>SOLUTION</b>
Unit won't turn on	AC adapter isn't plugged into a working wall socket or not properly connected	Plug the AC adapter into a working wall socket and plug the AC cable into the DC jack on the unit. Make sure any associated wall switch that controls the outlet is ON.
Device does not respond to the unit and/or device is playing but no sound comes out/ unit doesn't respond	Unit is not properly connected to power source and/or Power Button is not ON/device is paused	Check that the unit is ON. Try adjusting volume on unit and audio device. Also try pressing the Play/Pause Button. Make sure unit is properly paired to your device (check that iHome iZABT50 appears in the Bluetooth menu).
Erratic performance	External interference	Move unit away from potential sources of external interference such as computers, modems, wireless devices (routers) or fluorescent light.
No sound	Volume is too low	Turn volume up on unit and/or your device
Sound distorted	Volume is too high	Turn volume down on unit and your device
	Sound source is distorted	If the original sound file (MP3) is old or of poor quality, distortion and noise are easily noticed with high-power speakers. Try upgrading file from a trusted source such as iTunes.
No aroma	Essential oils are depleted	Remove the aroma tray, replenish the essential oil on the aroma pad, reload the tray, and reactivate the aroma fan.

# FCC INFORMATION

iZABT50  
FCC ID:EMOIZABT50  
IC:986B-IZABT50

## FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

**This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.**

- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-3 (B)/NMB-3(B)

## Canada Statement

This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage;
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la section 2.5 de RSS 102 et la conformité à l'exposition de RSS-102 rf, utilisateurs peut obtenir l'information canadienne sur l'exposition et la conformité de rf.

# IMPORTANT SAFETY TIPS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. Water and Moisture - The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
2. Ventilation - The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.
3. Heat - The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
4. Power Sources - The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance. Only use the AC adapter that came with the unit.
5. Power-Cable Protection - Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.
6. Cleaning - The unit should be cleaned only as recommended. See the Maintenance section of this manual for cleaning instructions.
7. Objects and Liquid Entry - Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.
8. Attachments - Do not use attachments not recommended by the product manufacturer.
9. Lightning and Power Surge Protection - Unplug the unit from the wall socket and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.
10. Overloading - Do not overload wall sockets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
11. Damage Requiring Service - The unit should be serviced by qualified service personnel when:
  - A. the power supply cable or plug has been damaged.
  - B. objects have fallen into or liquid has been spilled into the enclosure.
  - C. the unit has been exposed to rain.
  - D. the unit has been dropped or the enclosure damaged.
  - E. the unit exhibits a marked change in performance or does not operate normally.
12. Periods of Non-use - If the unit is to be left unused for an extended period of time, such as a month or longer, charge the unit fully before storage
13. Servicing - The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.
14. Magnetic Interference: This product's speakers contain powerful magnets which could cause interference or damage to sensitive equipment such as hard drives, CRT televisions and monitors, as well as medical, scientific, and navigational devices. Keep this unit away from these products at all times.

# LIMITED 1 YEAR WARRANTY

iHome Products, a division of SDI Technologies Inc. (hereafter referred to as SDI), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service.

If service is required, please call Customer Service at 1-800-288-2792 to obtain a Return Authorization Number and shipping instructions. A copy of the sales receipt is required to validate in-warranty coverage.

## Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI or any of its affiliates, contractors, resellers, their officers, directors,

shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgment and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI product.

© 2017 SDI Technologies, Inc. All rights reserved  
Questions? Visit [www.ihome.com](http://www.ihome.com)  
or call 1-800-288-2792 Toll Free